LEGO 10257

CAROUSEL

kED Installation Guide










Remove the clear yellow plates at the bottom




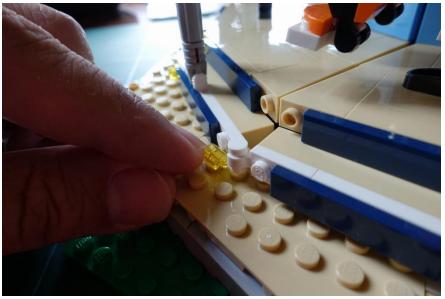

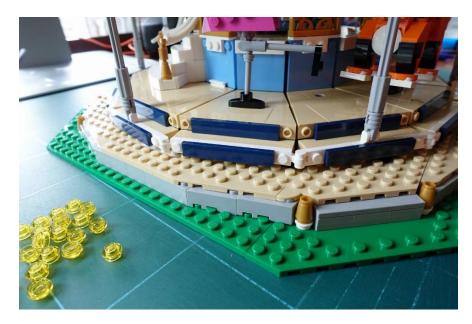



Remove the clear yellow plates at the top

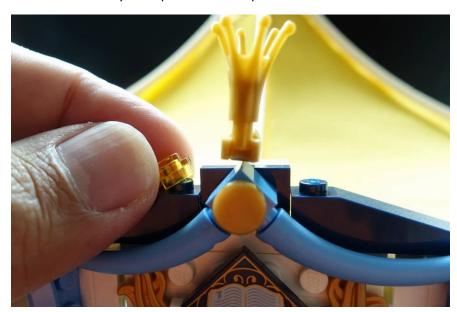


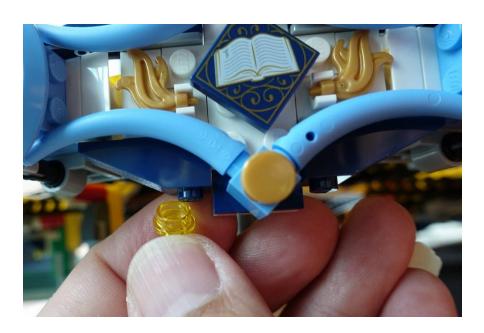



Detach the long white poles

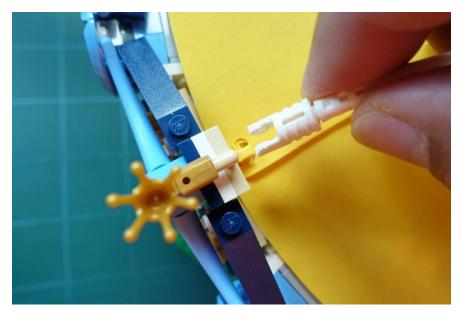

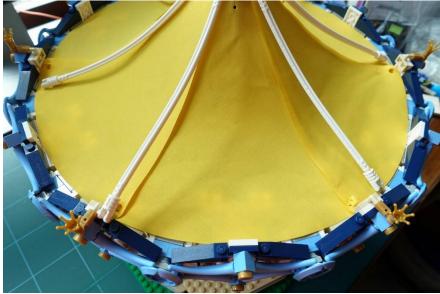

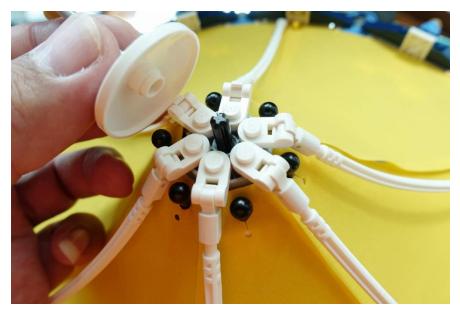

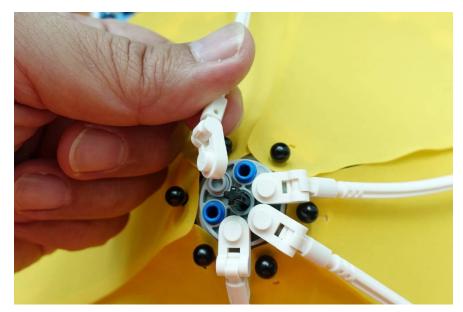

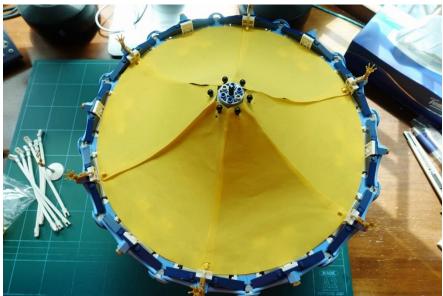

Remove the canvas





Battery box





Install one battery box on white plate






2 strings of clear yellow lights with black wire for carousel top



Connect 2 strings of lights to battery box

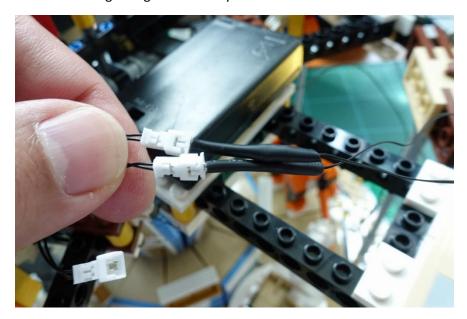

Detach 6 crowns






Install one string on the top



Put the crowns back

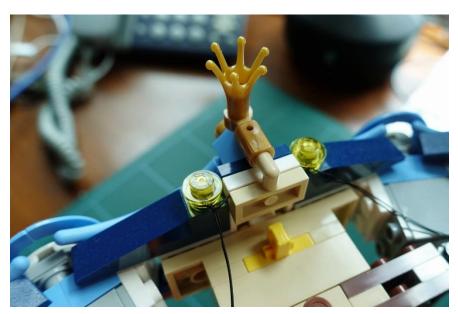


Install the other string at the bottom





Flashing light Plates

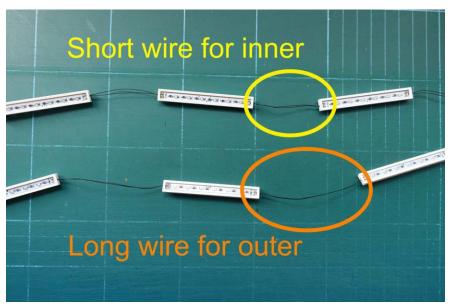




Connect short wire light plates to battery box



Install the light plates at the bottom by both hands

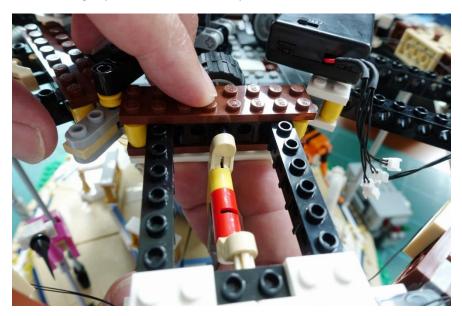


Install all 6 light plates round the inner carousel





Install another battery box on the other side and connect the long wire light plates



Install all 6 light plates beneath the grey plates round the outer carousel

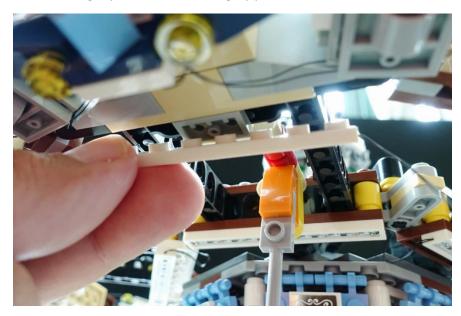

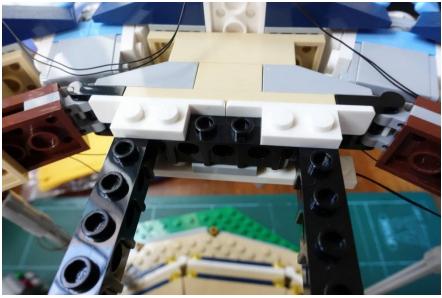

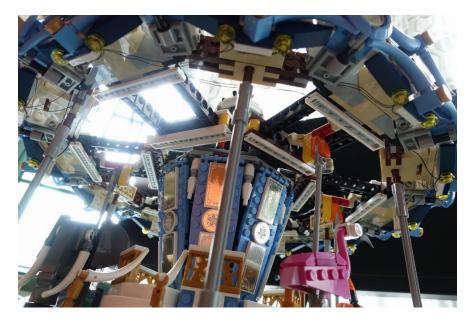


2 strings of lights with grey wire for carousel bottom



Rotate the grey wire round the grey pole



Connect to battery box

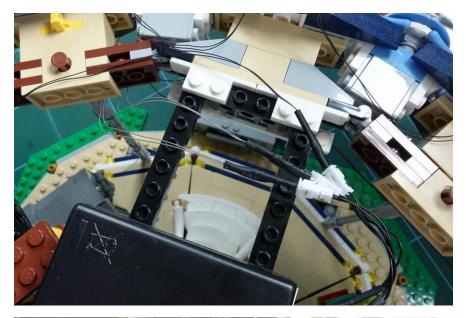




One string of clear yellow lights for each level



You can hold the wall inside the carousel by your finger

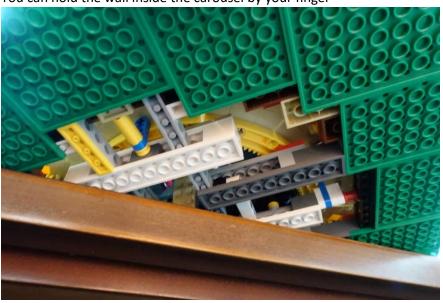




If you want to hide the wire, put the wire behind the dark blue tile for upper level light string




And press the wire under the rotating stage for lower level light string



Rotate the carousel by hand to make sure all wire okay

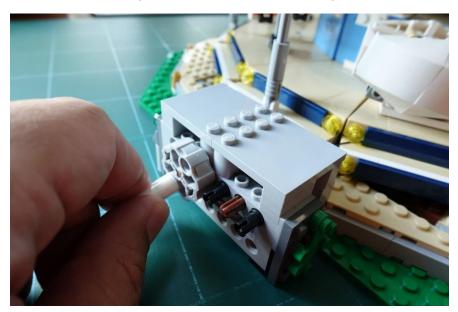

Put the long white poles and canvas back

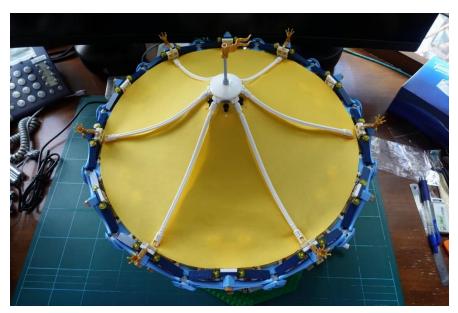

Switch on both battery boxes through the canvas



Done

