

# LEGO 21310

 
## OLD FISHING STORE

### LED Installation Guide






Take off the tower

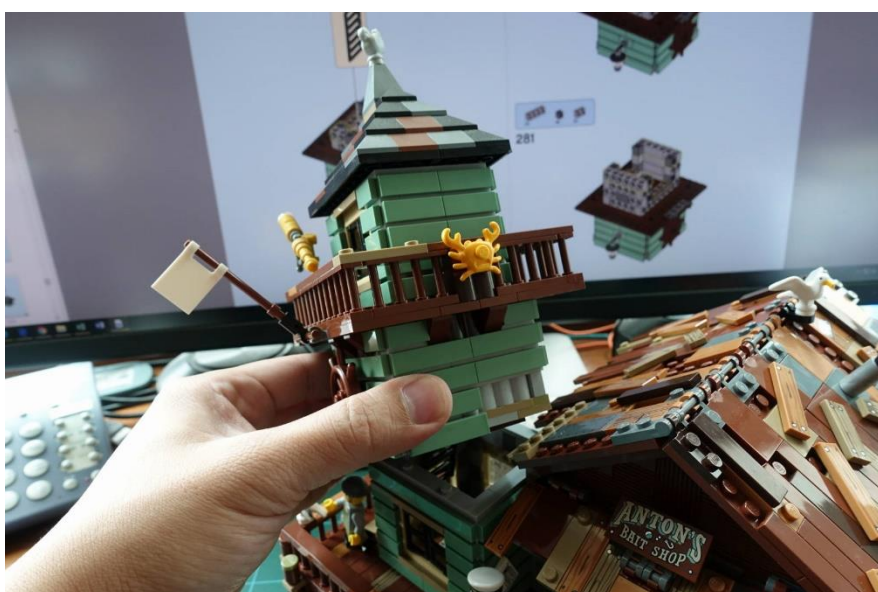


Take off the roof



 
Take off the signboard

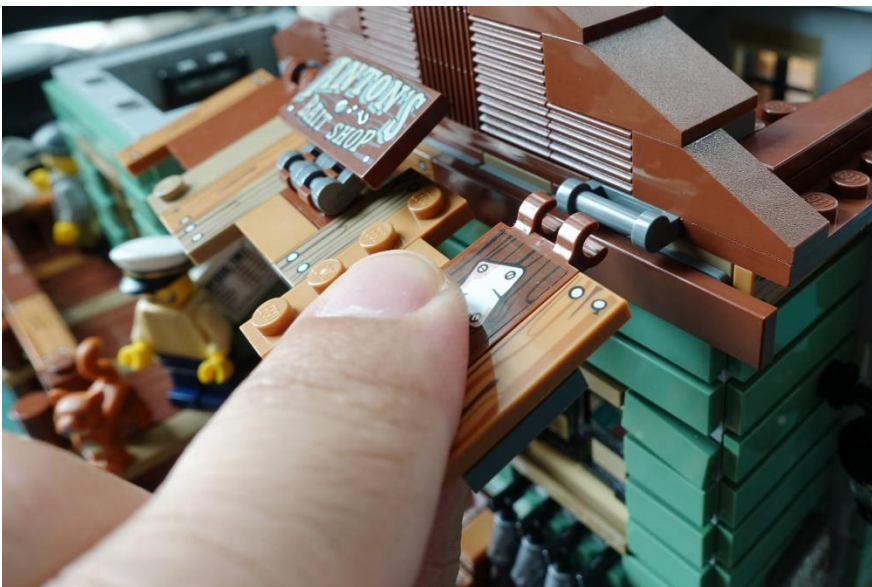

Loosen the brown triangle

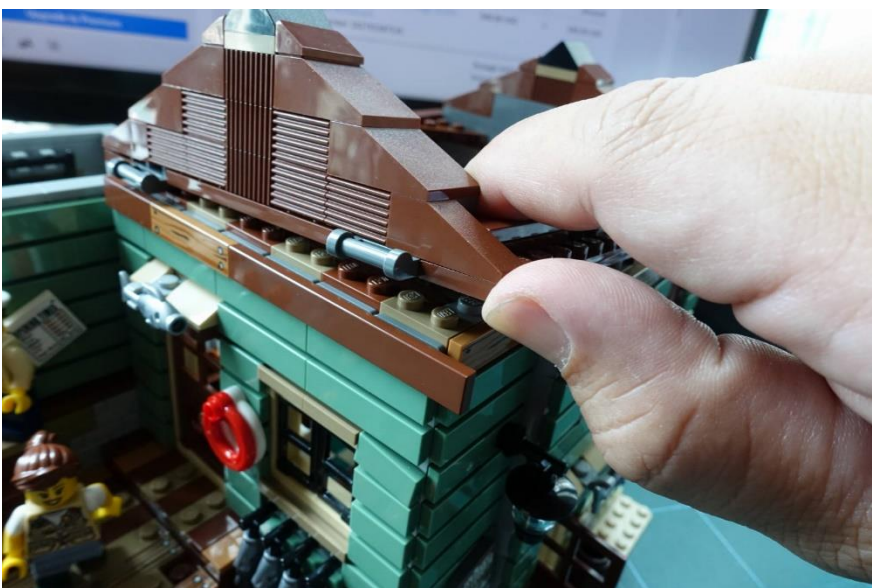

Remove the front part roof

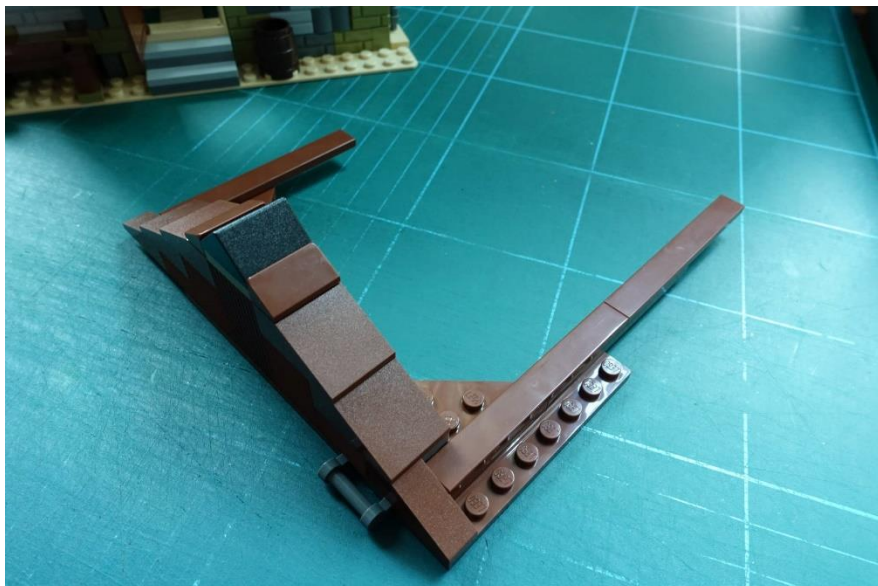

Side door



Push the door from inside and lift the door eaves





House light





Move the parts to brown light plate

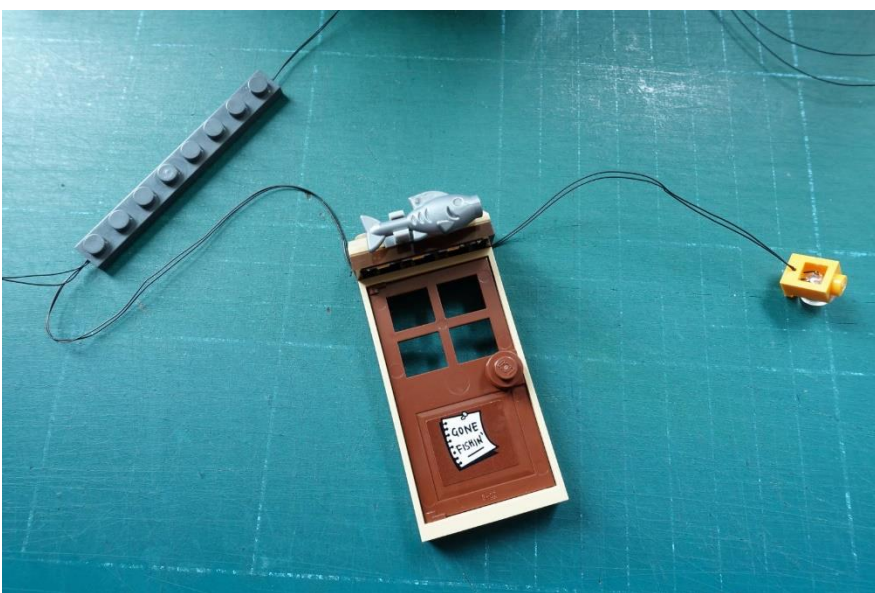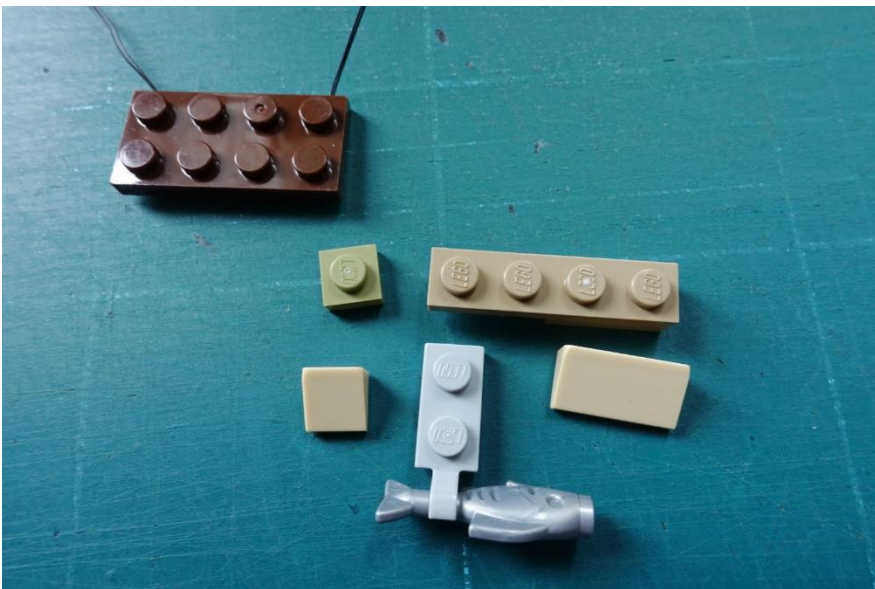


Take off the yellow lamp



Move the parts to yellow light brick



Replace the door lamp by clear light as well

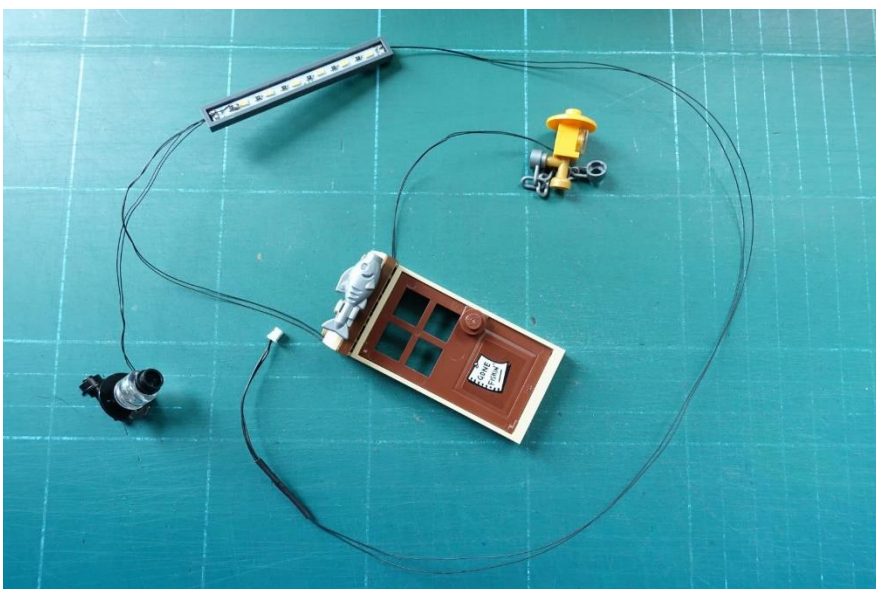

Install the door from inside of the house







Put the yellow lamp back




Remove 3 tiles



Put the wall lamp back and hide the wire under the tiles



Install the grey light plate behind the signboard and put it back

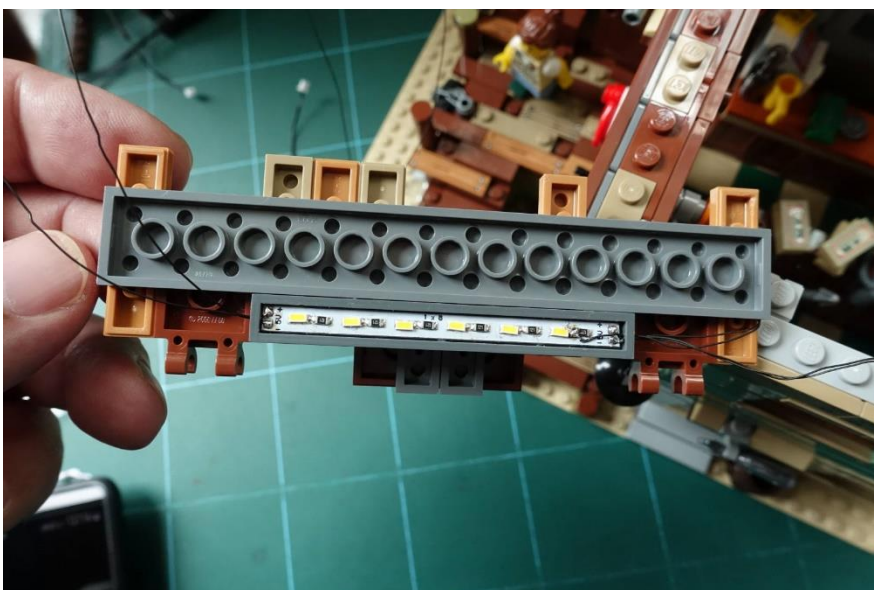


Make sure the wire not on top of studs, put the front roof back





The roof



Roof lights

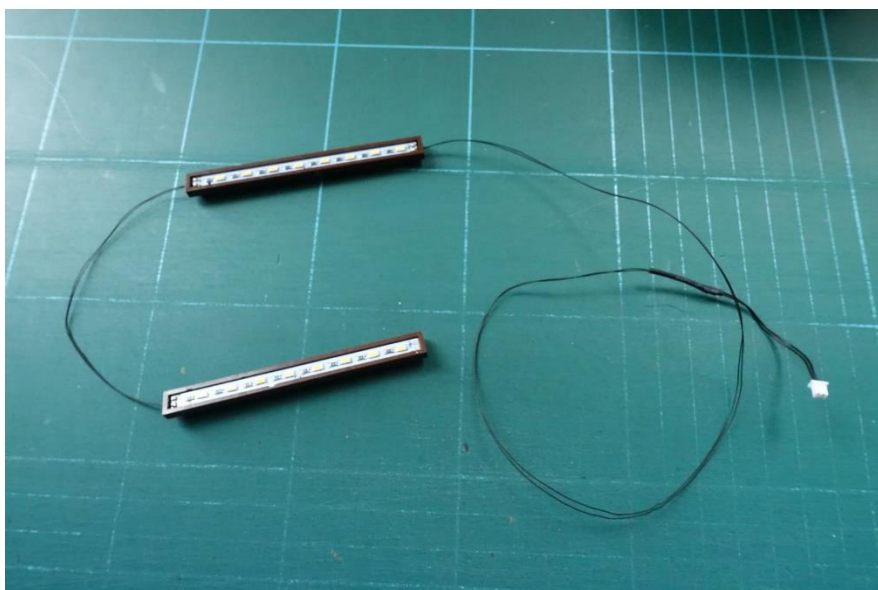


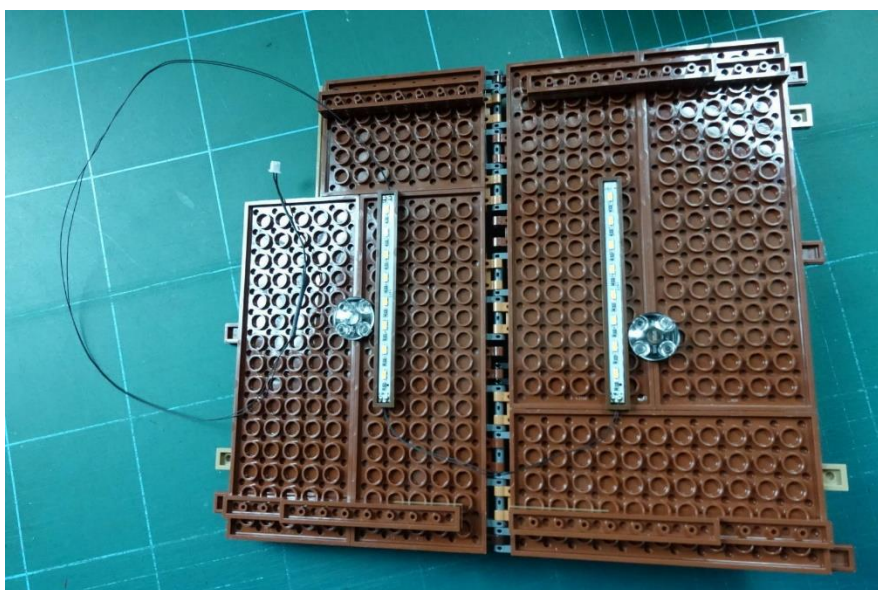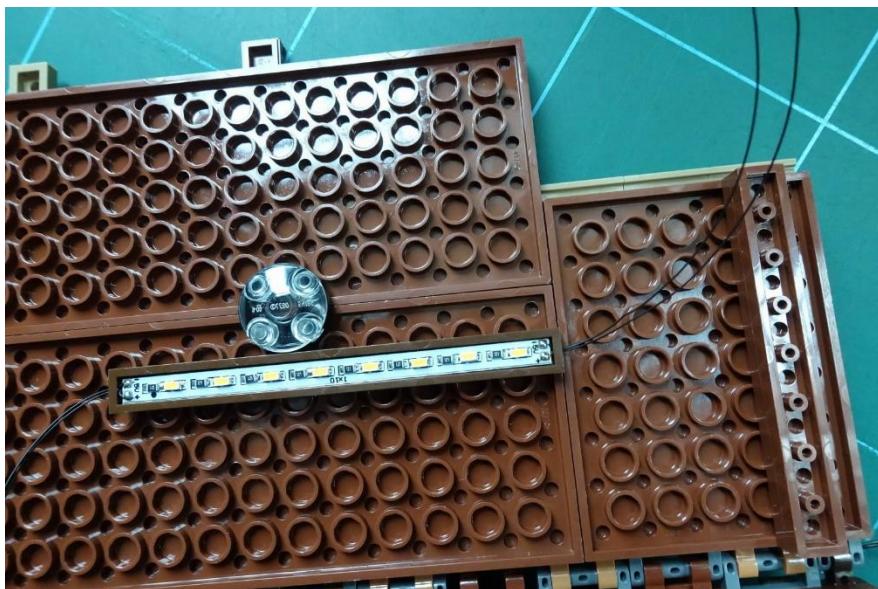

The tower





# Tower lights

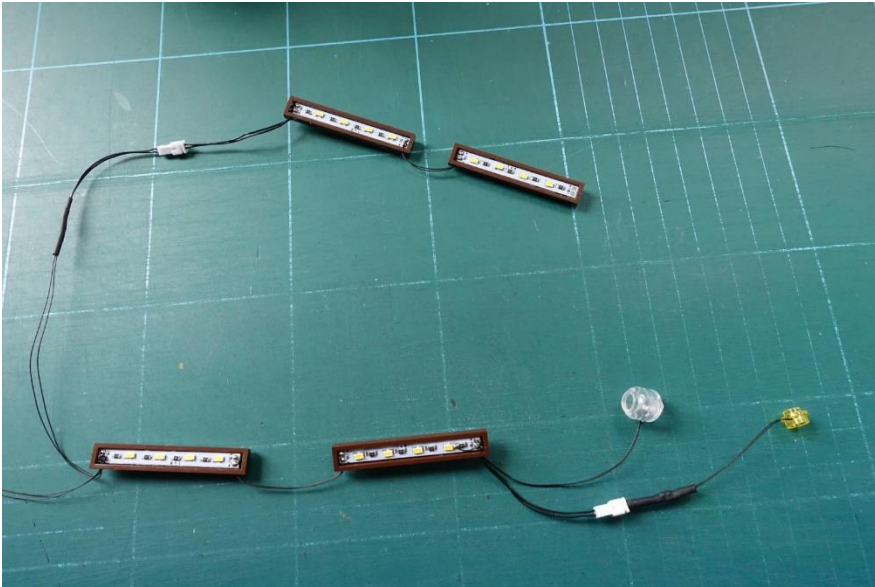


Replace 2 brown plates by light plates



  
Move other lights to the bottom of the tower

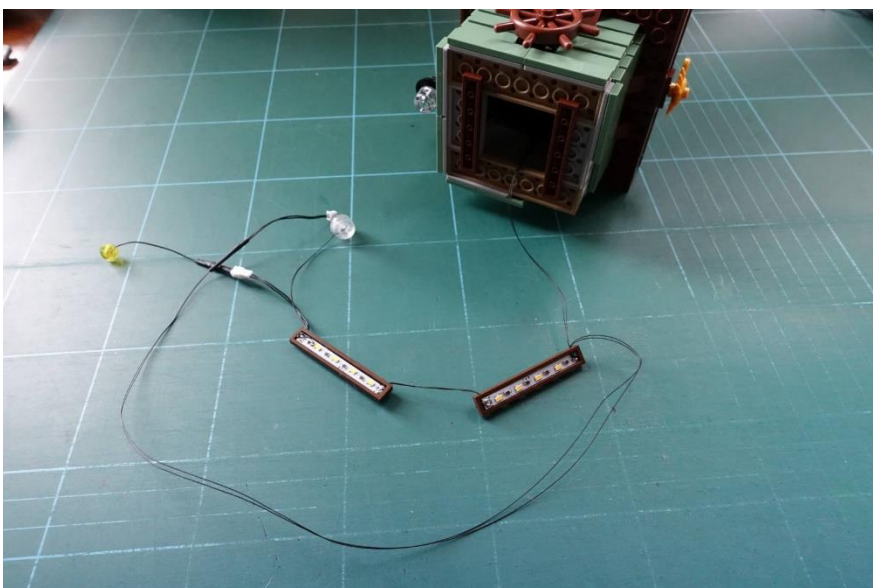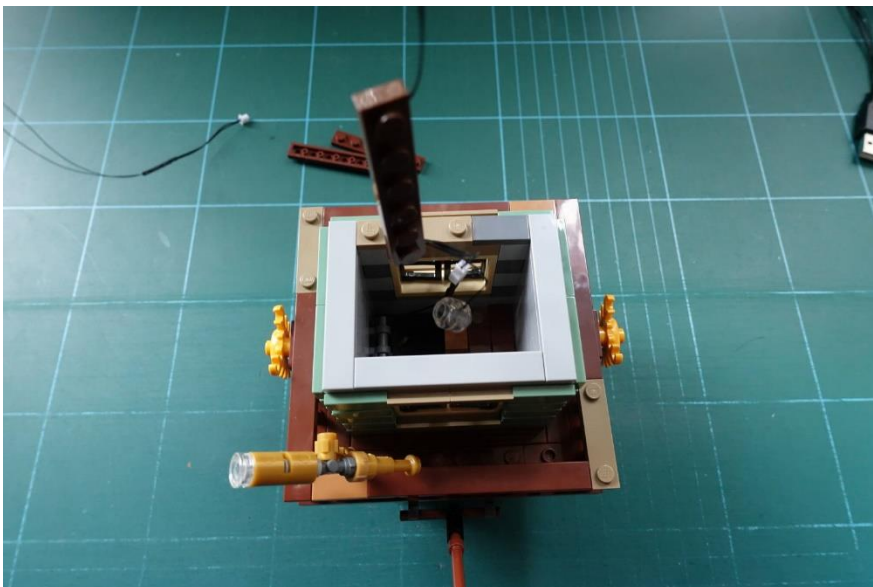


Replace 2 brown plates by light plates

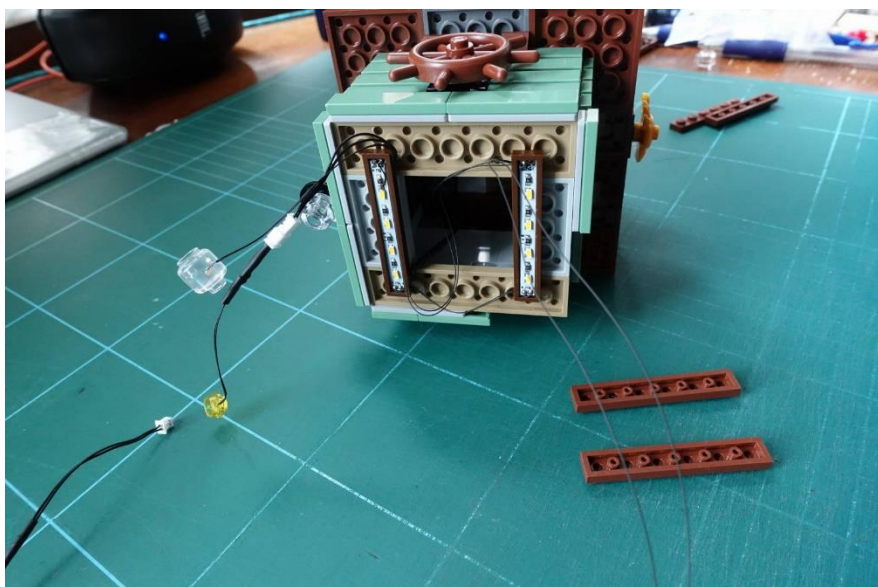 


Replace the wall lamp by round light and hide the wire under the tiles

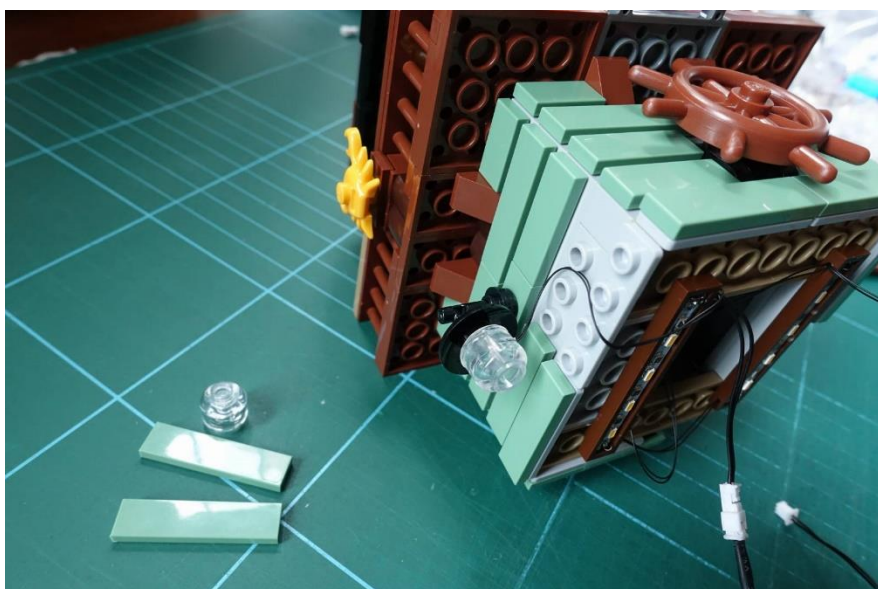

Remove the desk lamp

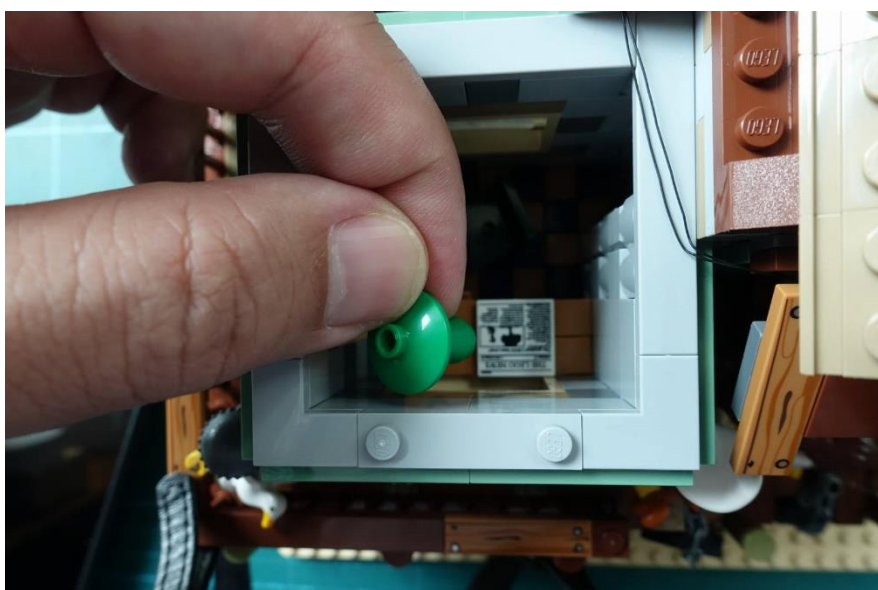

Replace the clear yellow round plate by the light part

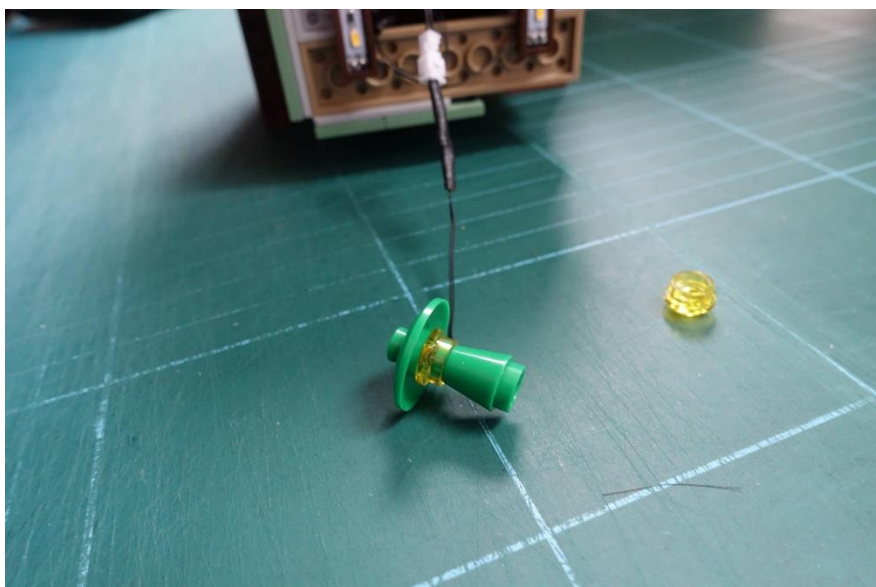


Put the desk lamp and tower back





Plug in the connectors to USB plug

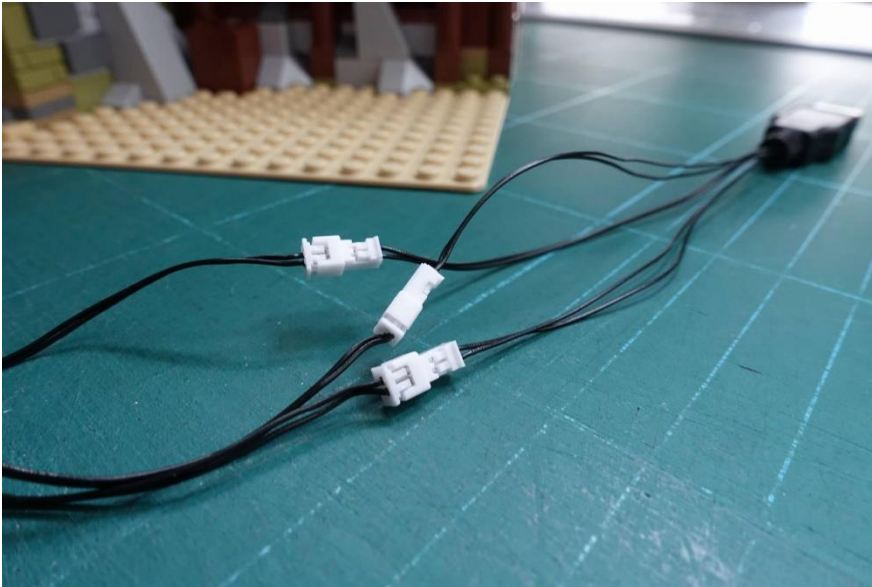

Plug in the USB and done

