





Replace Luke's lightsaber. I have run the cable through the gap of the spinning door but you can choose another way if you want to allow the door to be able to fully spin.

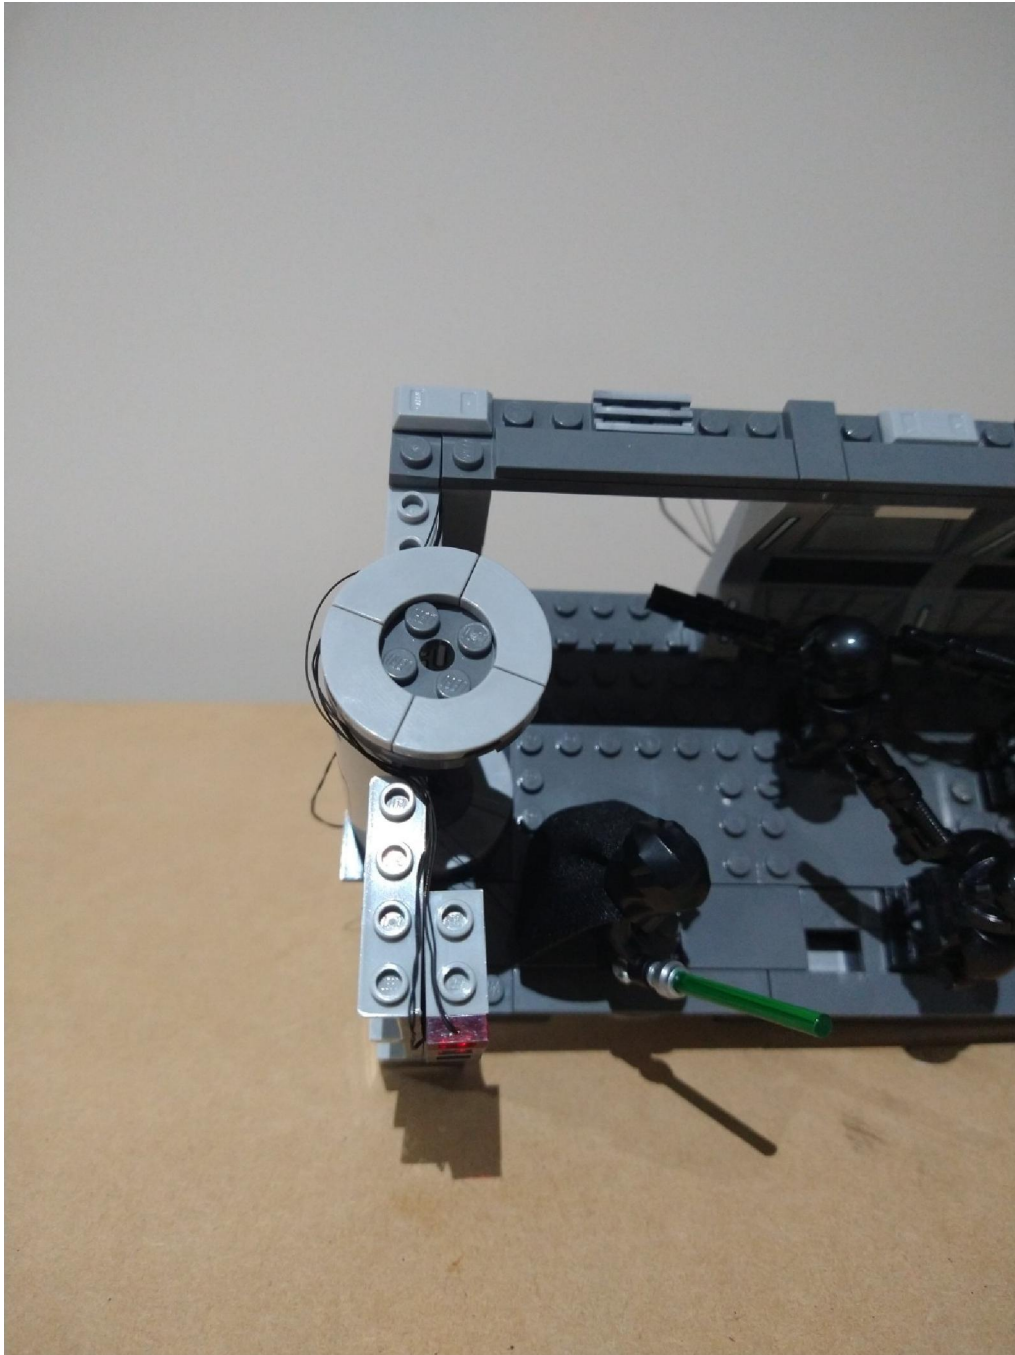

Run the wires for the white and red 1x1 plates along the top as shown.

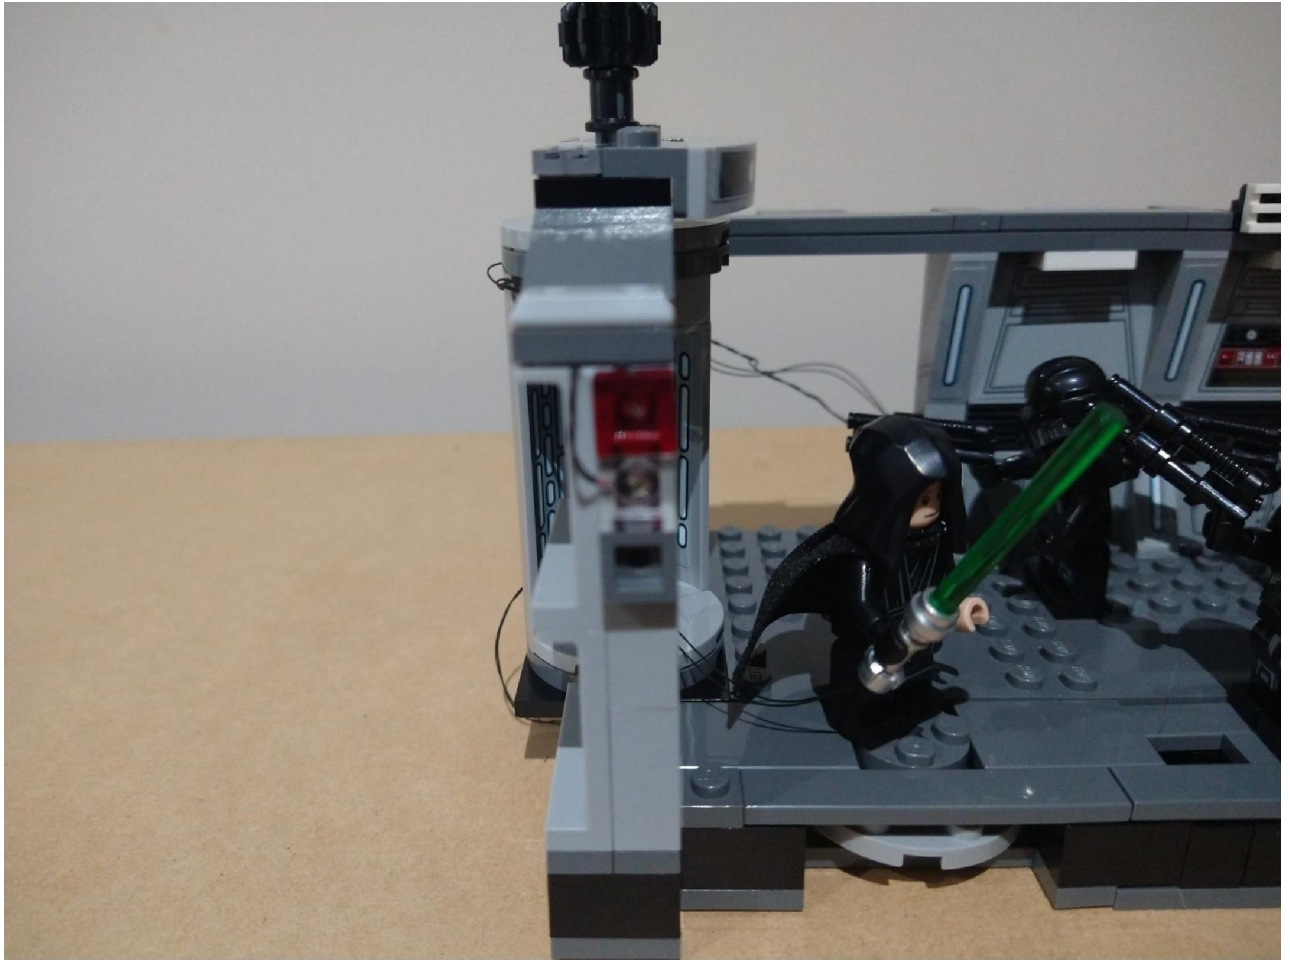

Replace the original parts with the LEDs and place the top parts back on



The picture shows where the 1x2 plates are placed which will allow the wires to be run out the back.



Connect the LEDs to the battery pack using the Y connection to give you another output from the battery pack and turn on.