
Lego 21331

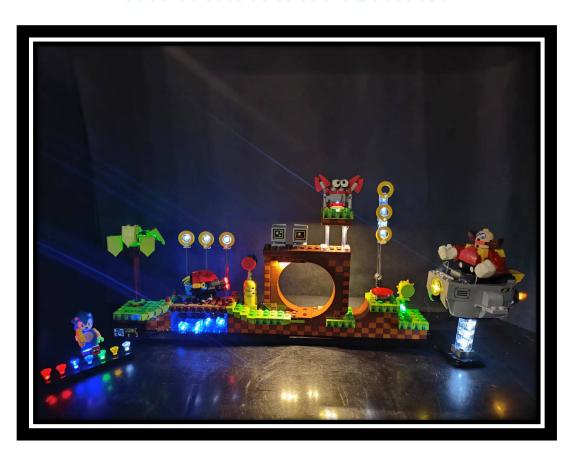


Green Hill Zone

Installation Guide






Start from the single white dish lighting part for the crab

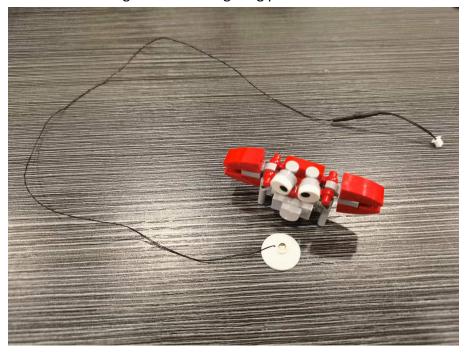

Place it at the bottom of the crab to replace It's dish

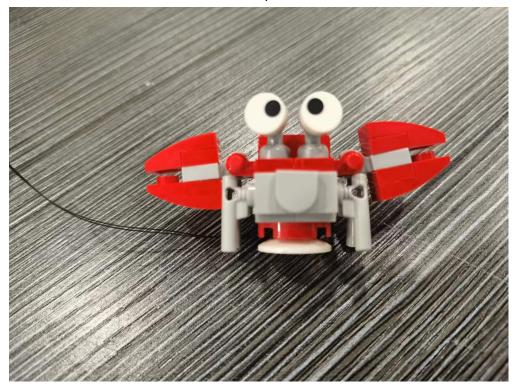

Replace the shown red round plates by the lighting round plates



Then take the shown lighting parts to modify the rack of the gems




Remove the gems then replace the tiles of the rack by the lighting part




Take the shown part to assemble on the flying ship




Take the ship out, replace the clear round bricks by the lighting part, Then put the ship back and replace the lighting fire and the front light

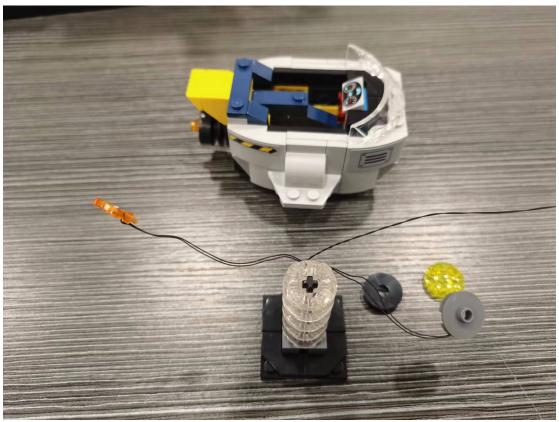


Now take this lighting parts to assemble it on the base

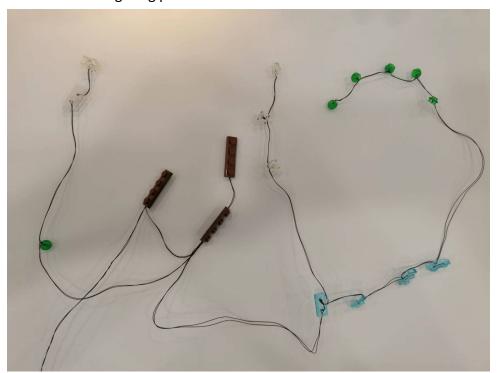


Assemble the clear bricks and the green round plate follow by at the shown spots

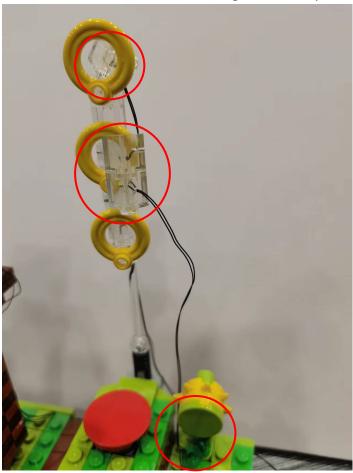

For the there brown lighting plates followed by it, assemble them on the brown circle The single one on top and the rest two at the lower level

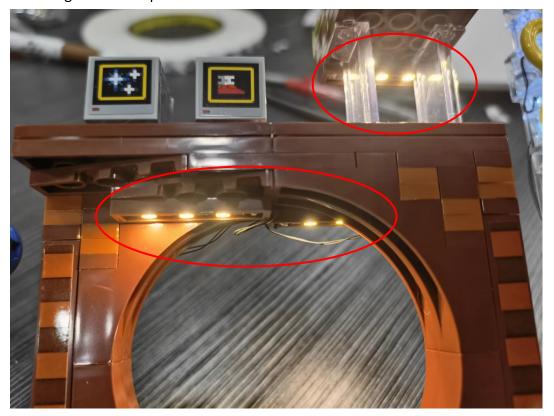

Assemble the 3 pieces of lighting plates at the rings above the bridge

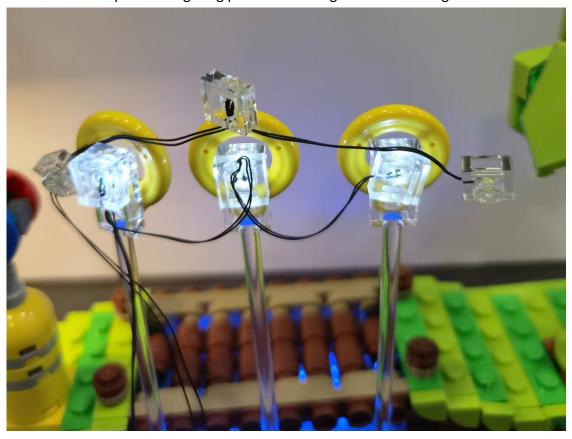

The blue 1x2 lighting plates will be assembled on the rive Remove some plates from the model to put the lights on



At last, assemble the green lighting round plates on the tree



