
Lego 76450


Book Nook: Hogwarts Express

Installation Guide



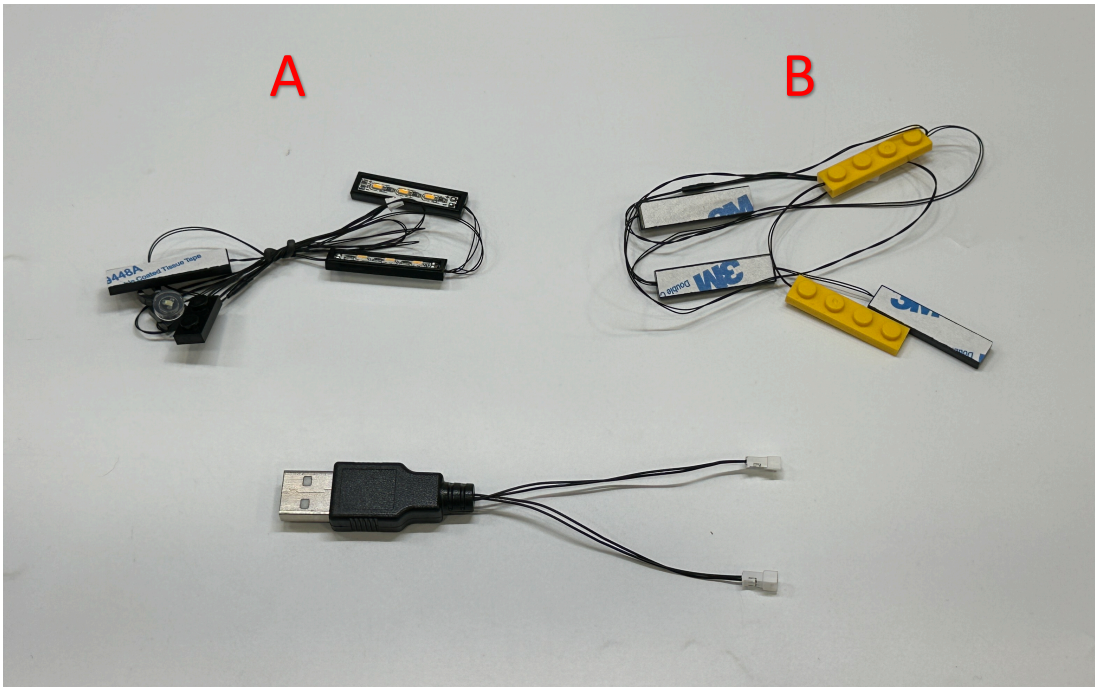


Take the lighting part A to assemble to the certain side

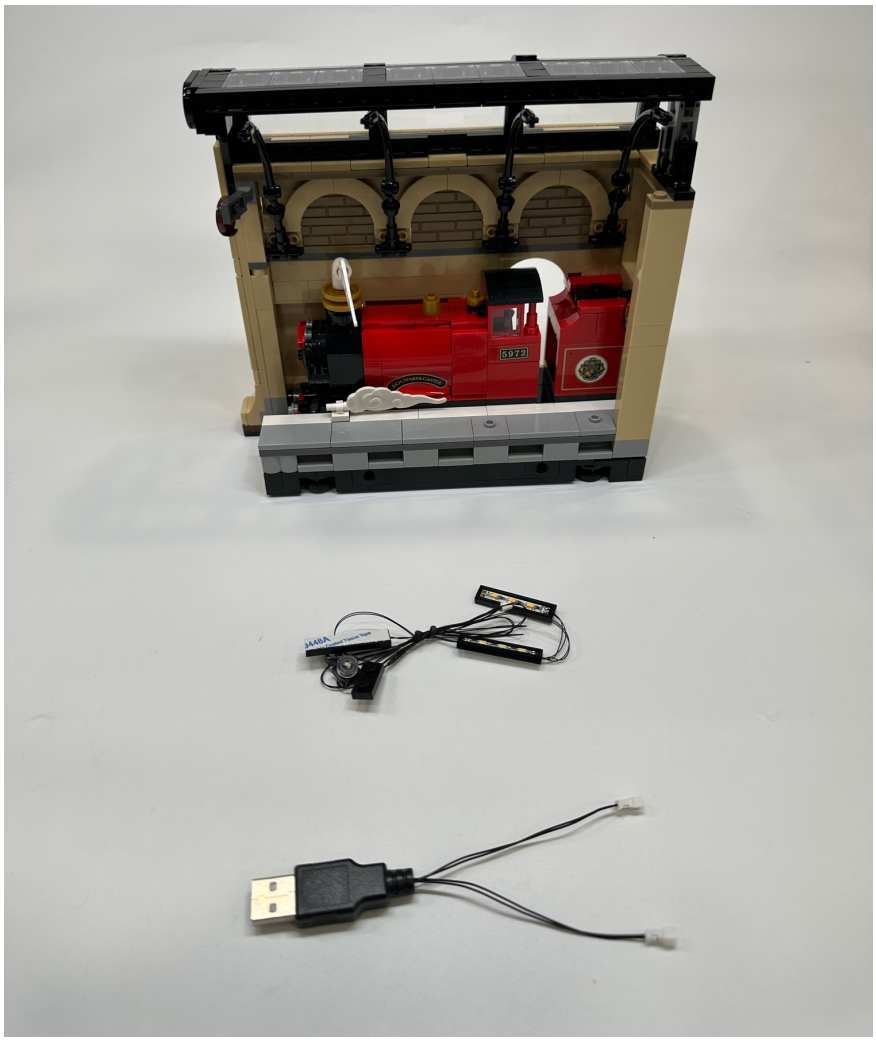

Take the lighting parts shown at the end, replace the headlight of the train



Remove the cover and assemble the lighting plate connected with the headlight

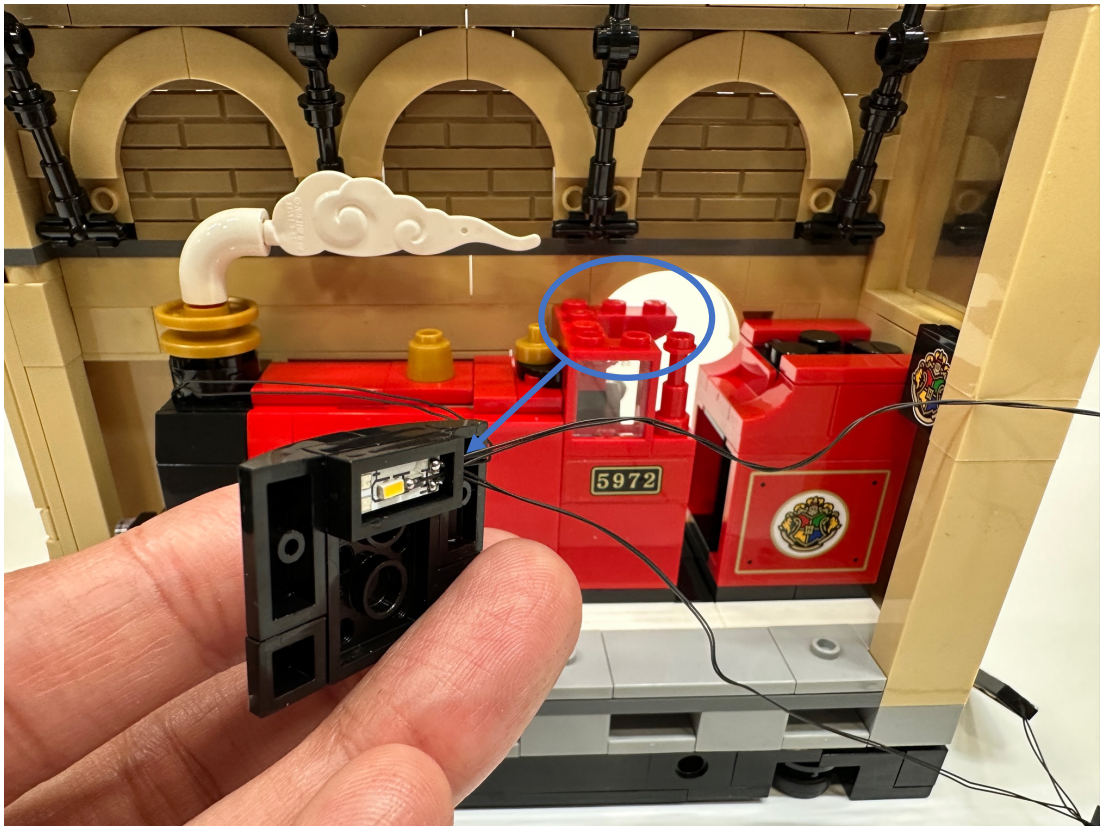


Restore the cover and hide the wire behind the train




Move the remain lighting plates to the top and assemble them




Lighting part A is finished installation

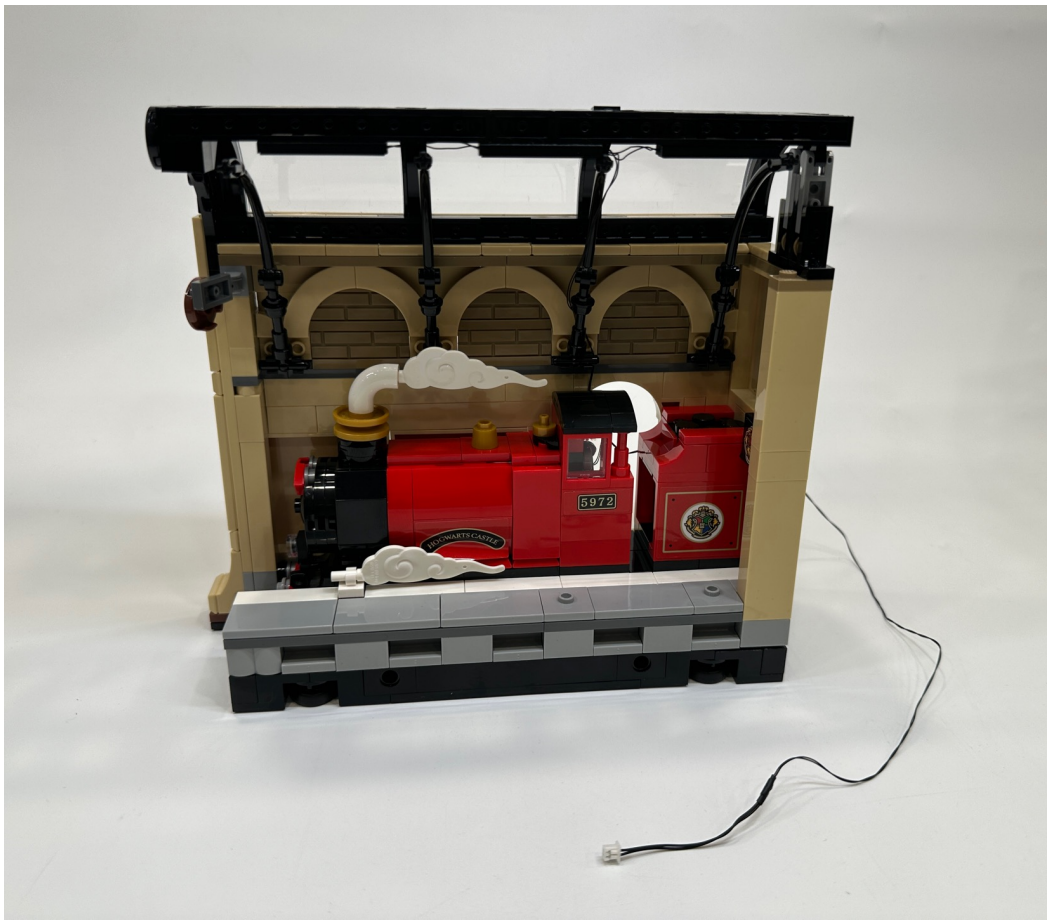


Place the led bulb inside the red round tile, place the wire in between the bricks of the

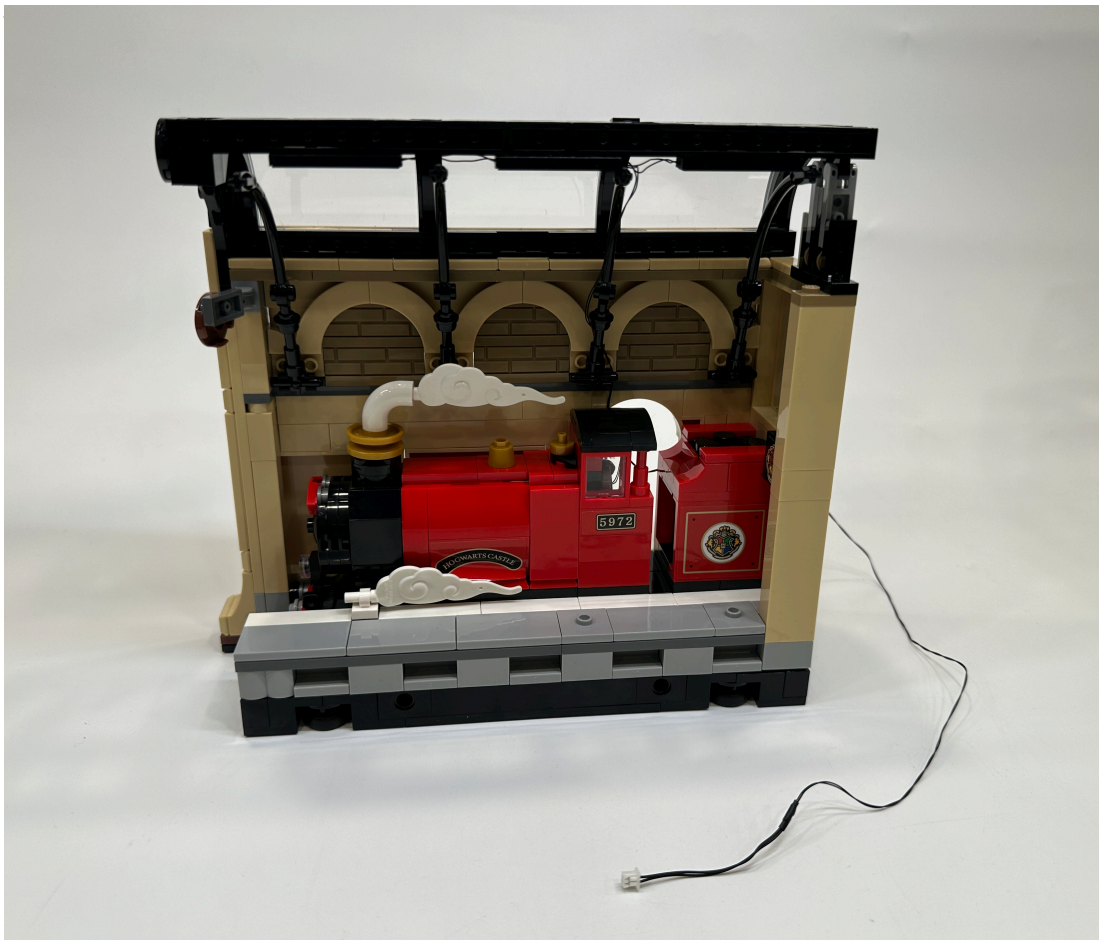


Take lighting part B for the other side

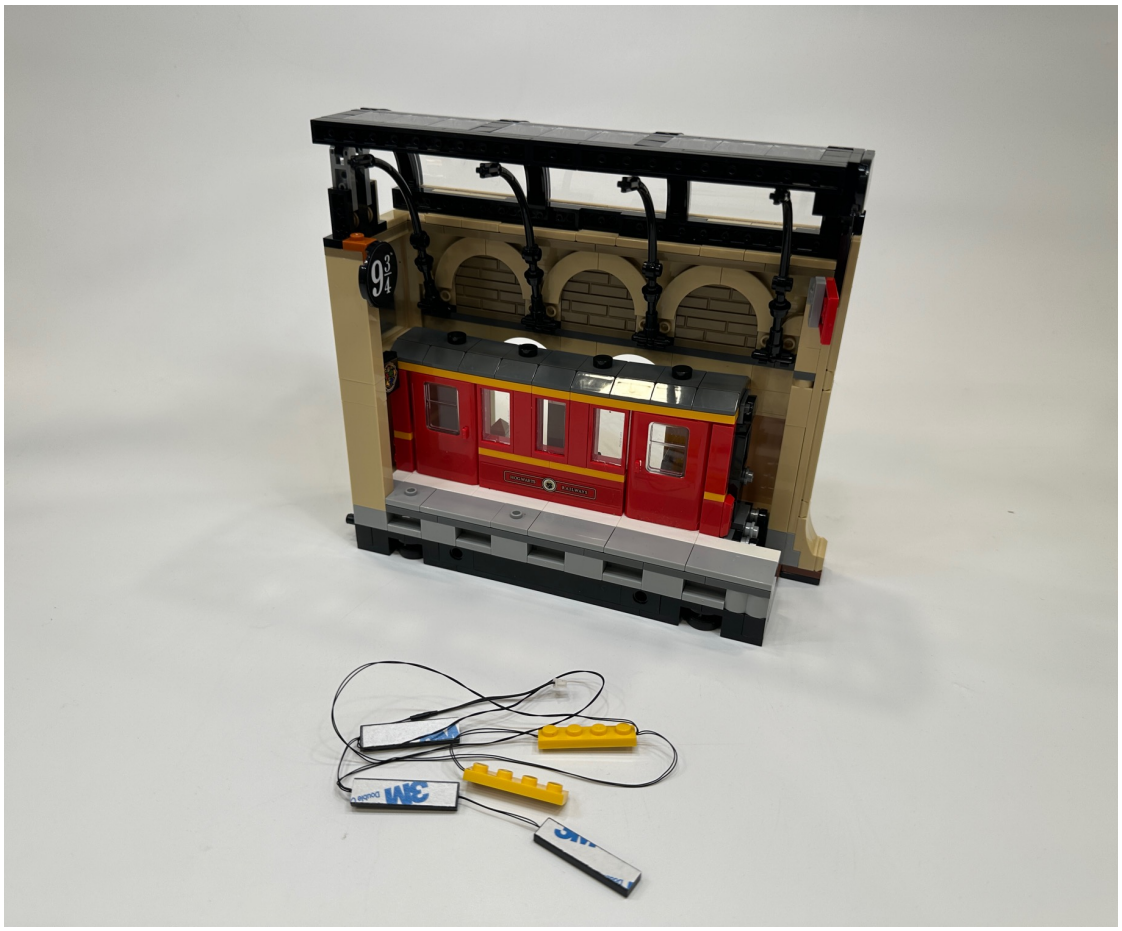

Remove the top cover of the train and assemble the yellow lighting plates as shown

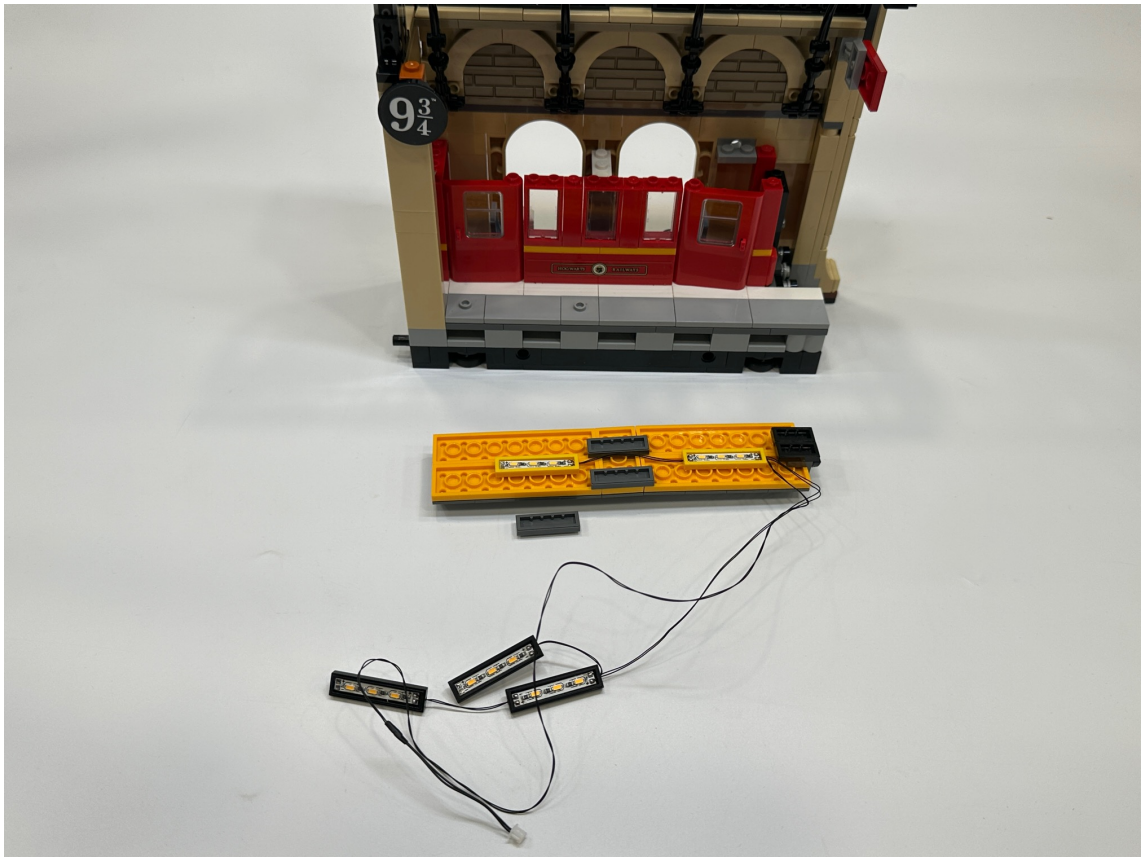

As shown in previous step the grey plate in the middle was removed, restore if after the lighting plates and wires are settled

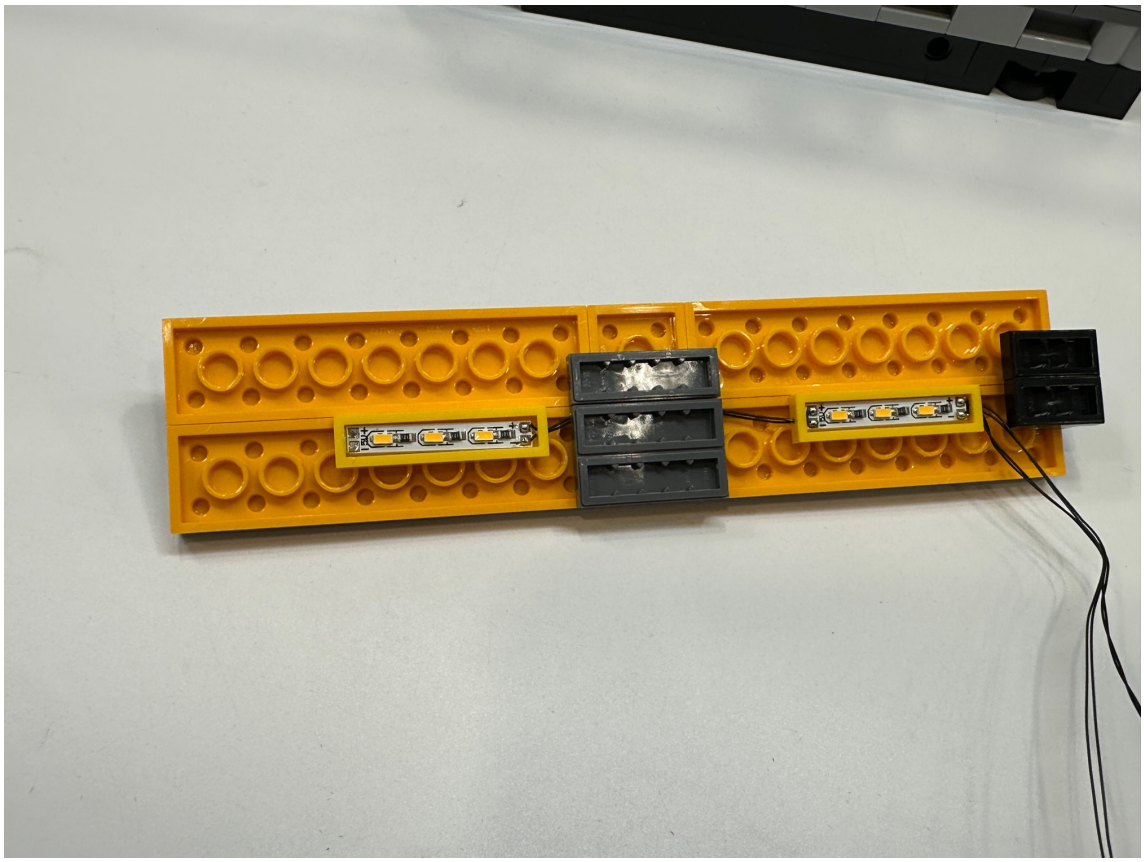


Restore the train cover, place the connector to the back (red circle)



Now assemble the remain lighting plates to the top



Now lighting part B is done

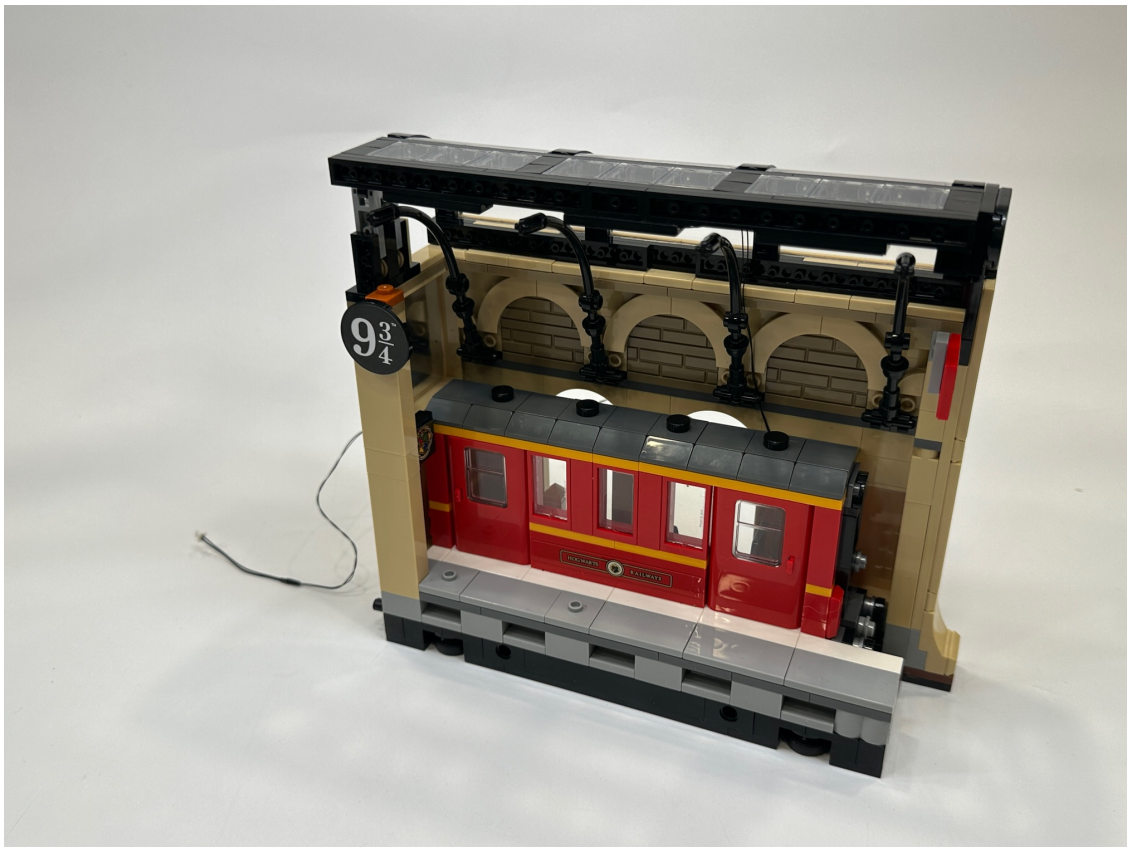

Gather both sides and the lighting parts and connect with USB cable

