


Ferrari F4O LED Installation Guide

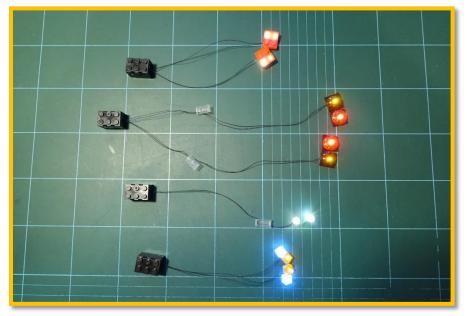





USB version go to next page. Battery Version LED have to install the battery boxes first




Install the front lights battery boxes at the front

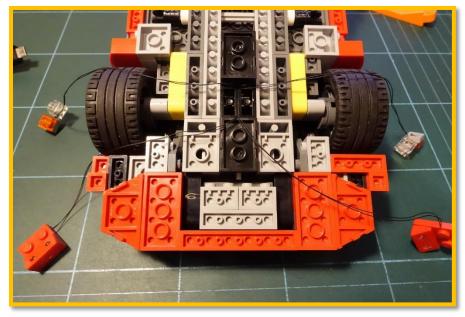

Install the room light and rear lights battery boxes at the back

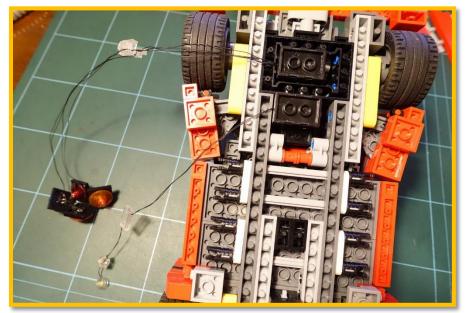

Before the installation, plug in and test all lights first

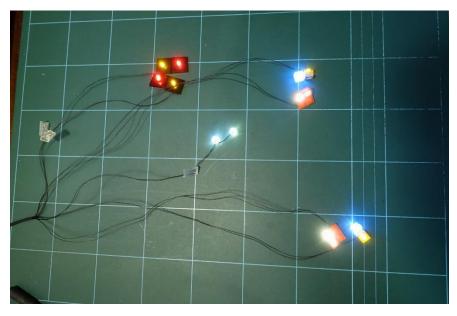

Identify left and right side front light



Take out the wheel cover





Remove the original popup light



Replace with LED parts



Take out the light cover and some other parts







Replace the front lights with LED parts



Move the original clear orange tile to the LED if you want

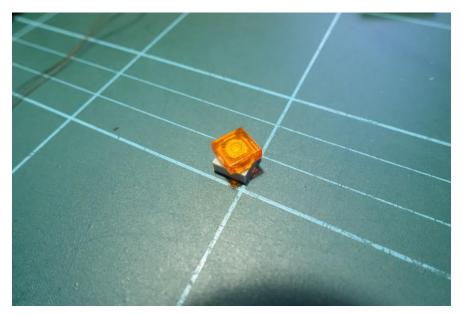

Clear orange brick comes with LED

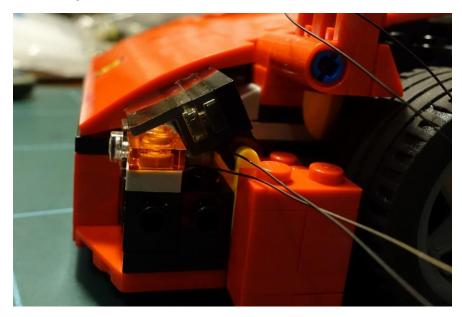


Replaced by original clear orange tile



Move both sets of wire from front of the wheel to the bottom of the car



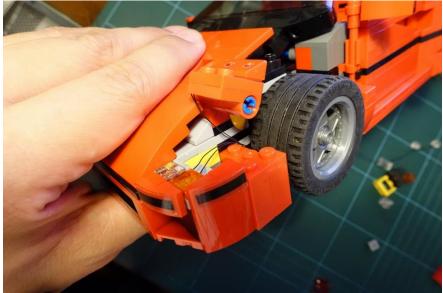





Put the parts back, leave the popup light open




Fix the wire position by the provided clear brick at the bottom

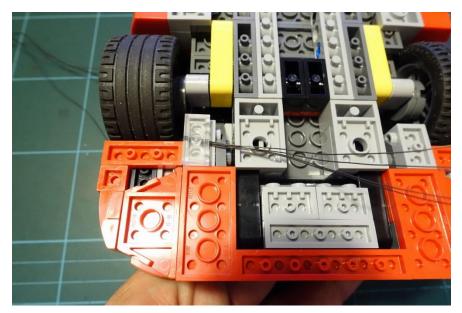


Do the same steps for the other side

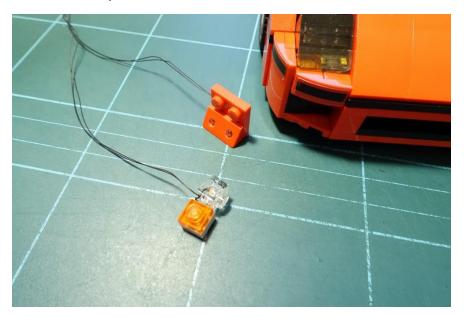


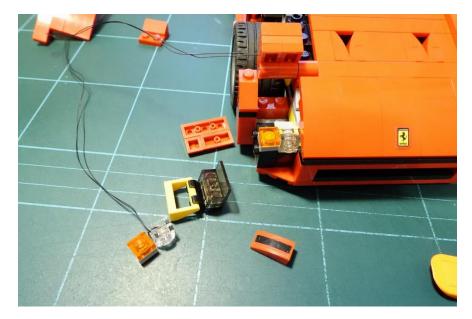


Fix the wire position by more clear bricks

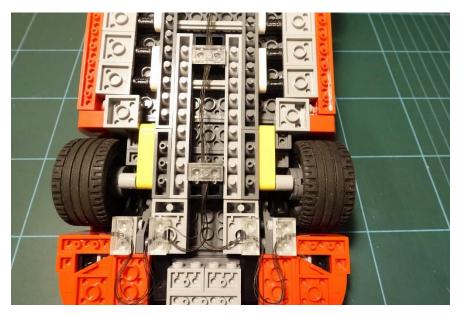

Battery version

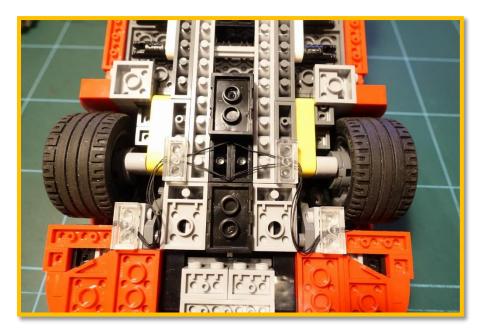


Room lights

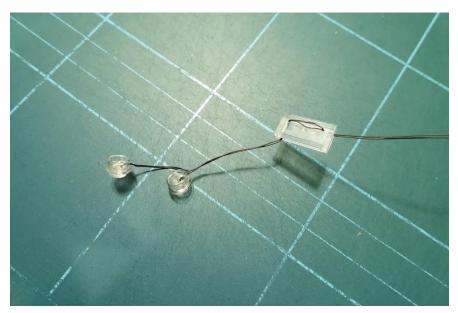


Remove the step board



Move the wire to interior through the gap

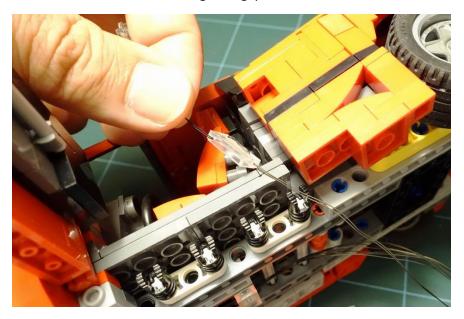


Remove the windscreen

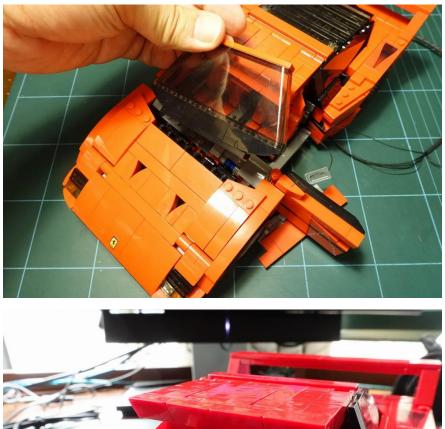




Take out the driver's seat

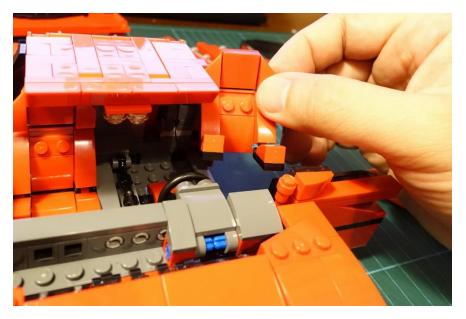


Use the brick separator to install the tile at the back

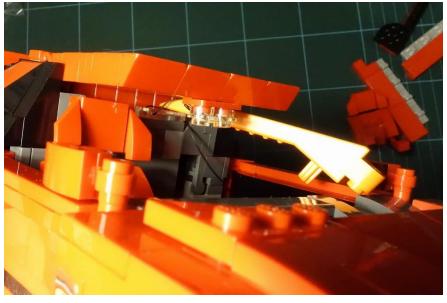



Put the seat and windscreen back

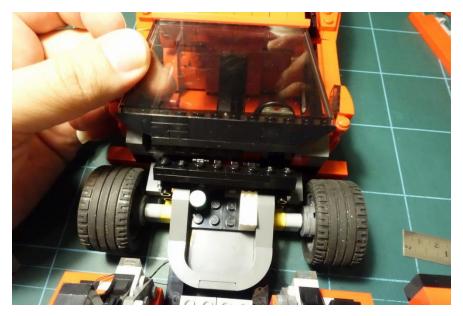

Rear lights



Remove some parts under the light



Take out the rear lights with black plates



Identify the left and right side of rear lights




Move the original clear orange dish to the LED if you want (light orange is the original one)




Move the wire to the engine compartment



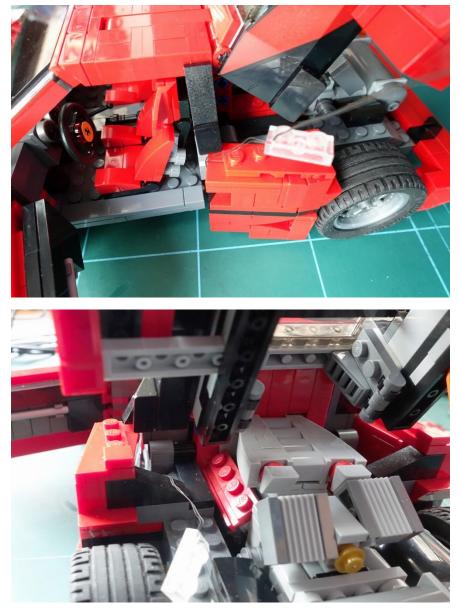

Install the rear lights, fix the wire by the gray bricks

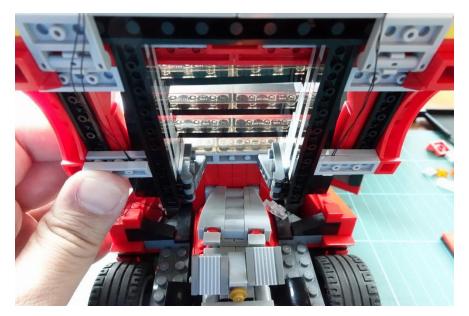


Use the clear brick to fix the wire position beside the engine




Do the same steps for the other side




Turn to the bottom, detach the parts round the muffler and put the wire under it

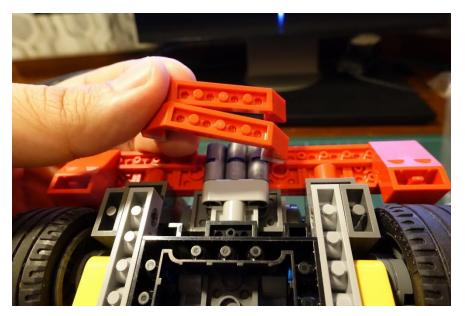


Use the provided red brick to fix the wire

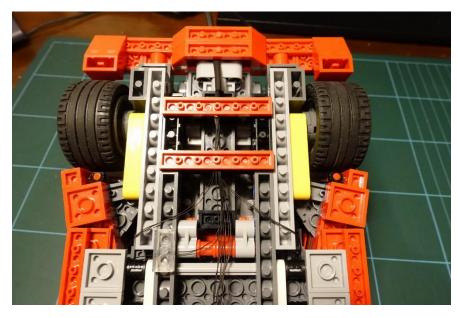

USB version bottom, fix the room light wire by a clear brick

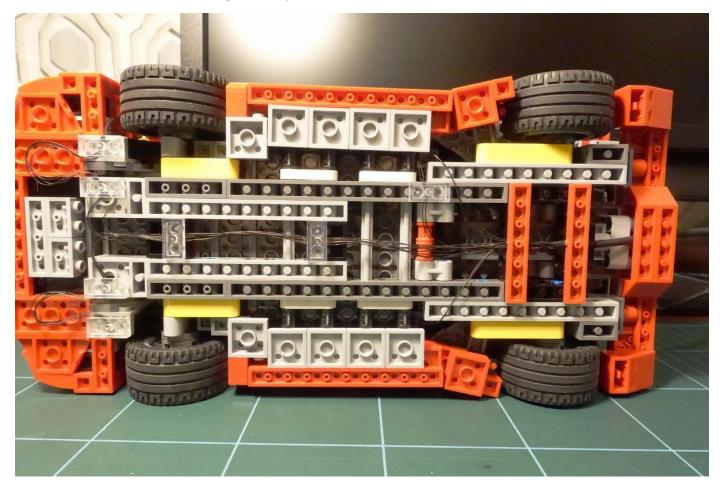

Battery version bottom, fix the room light wire by a clear brick

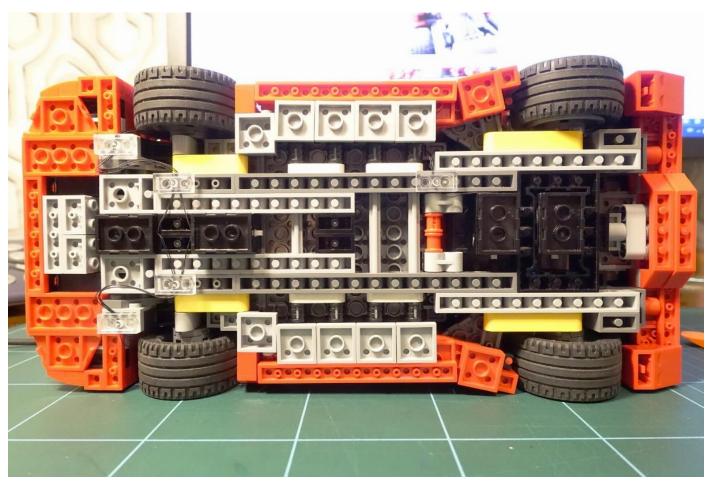

Done!

