

Lego 10269

Harley-Davidson® Fat Boy®



Installation Guide







Remove the following parts




Combine the lighting puts with the removed part as below

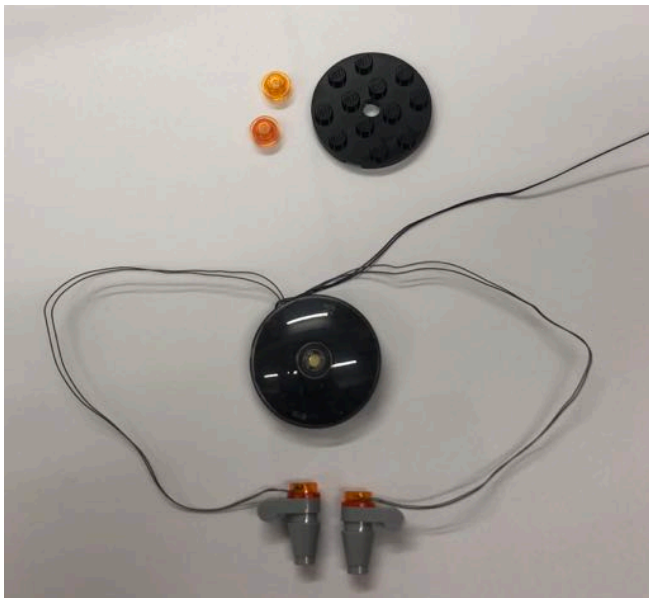


Remove the handle out of the body and put the lighting parts on like this

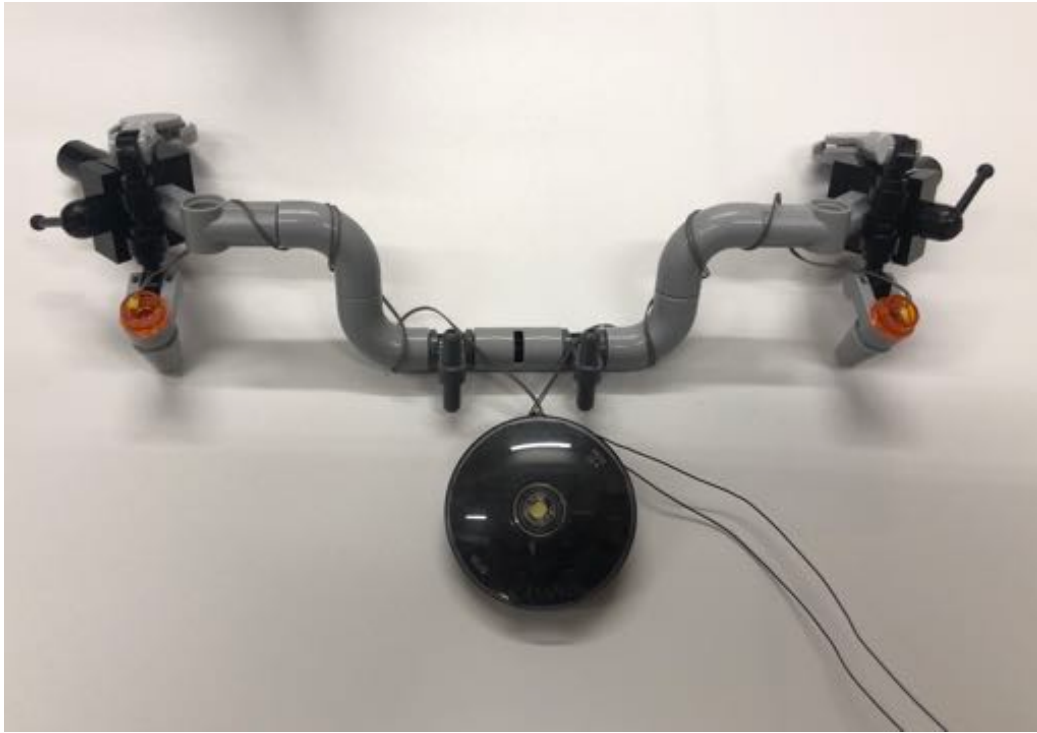

Settle the wire underneath the handle, put the handle back to the body and put the cap back on (beware the wires has to be in middle of the studs to prevent breaking the wire)

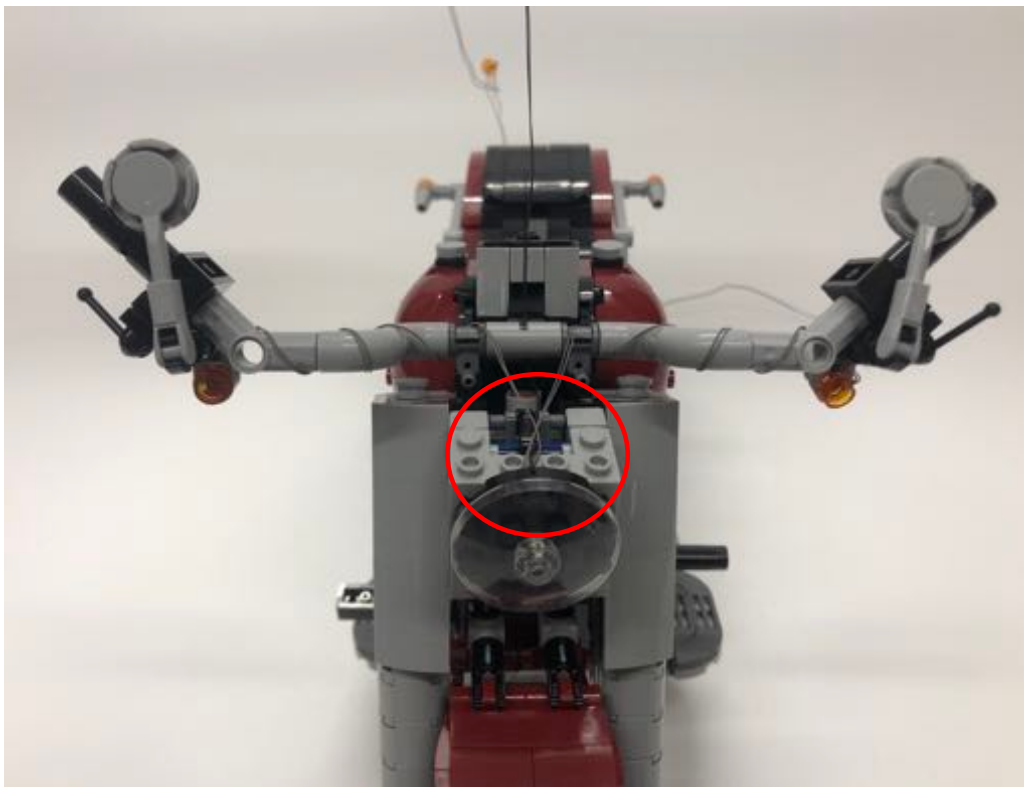


Pull the wire underneath the bike and use the plate to stabilize it

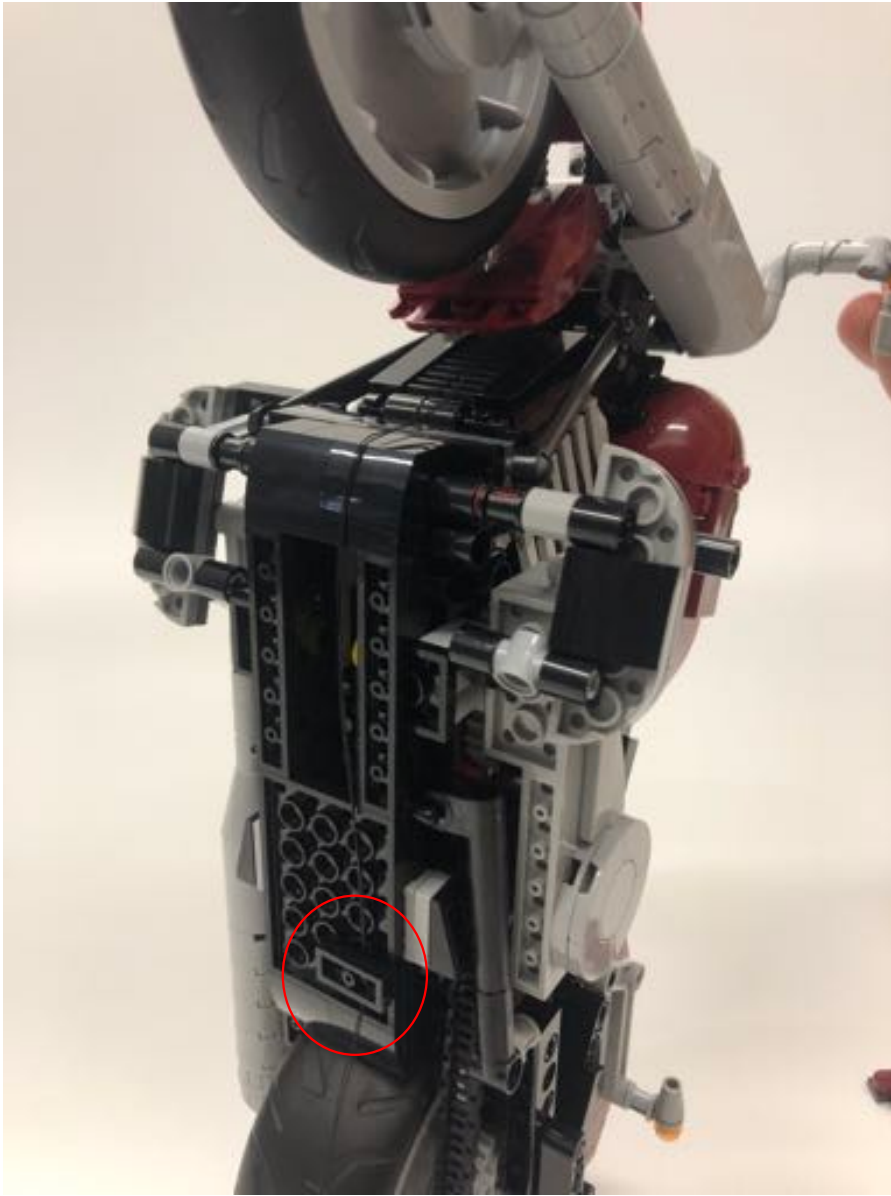

Remove these part out of the rear side




The wire has to be come up from the pipe side so that the chain won't be block
When the wheel is spinning

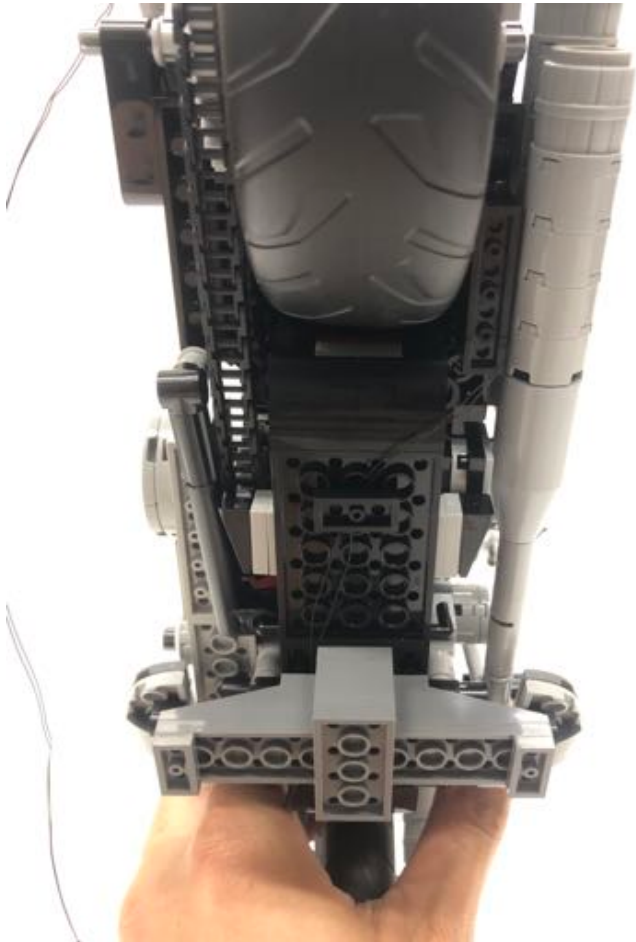

Install the rear light



Replace the parts of the brake light with the lighting part, combine with the license plate

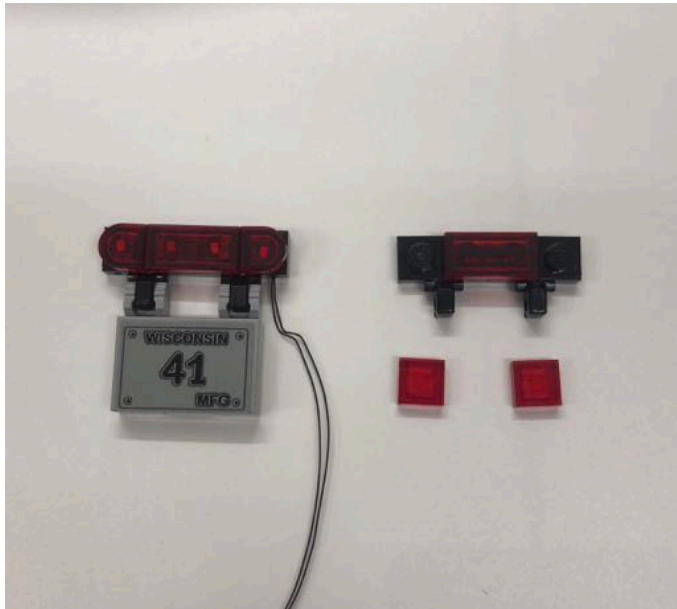

Install the brake light, connect the USB cable and that's it

