


Remove top and face parts as shown.



Place the 2 white 1x1 plates on the bottom of his chin

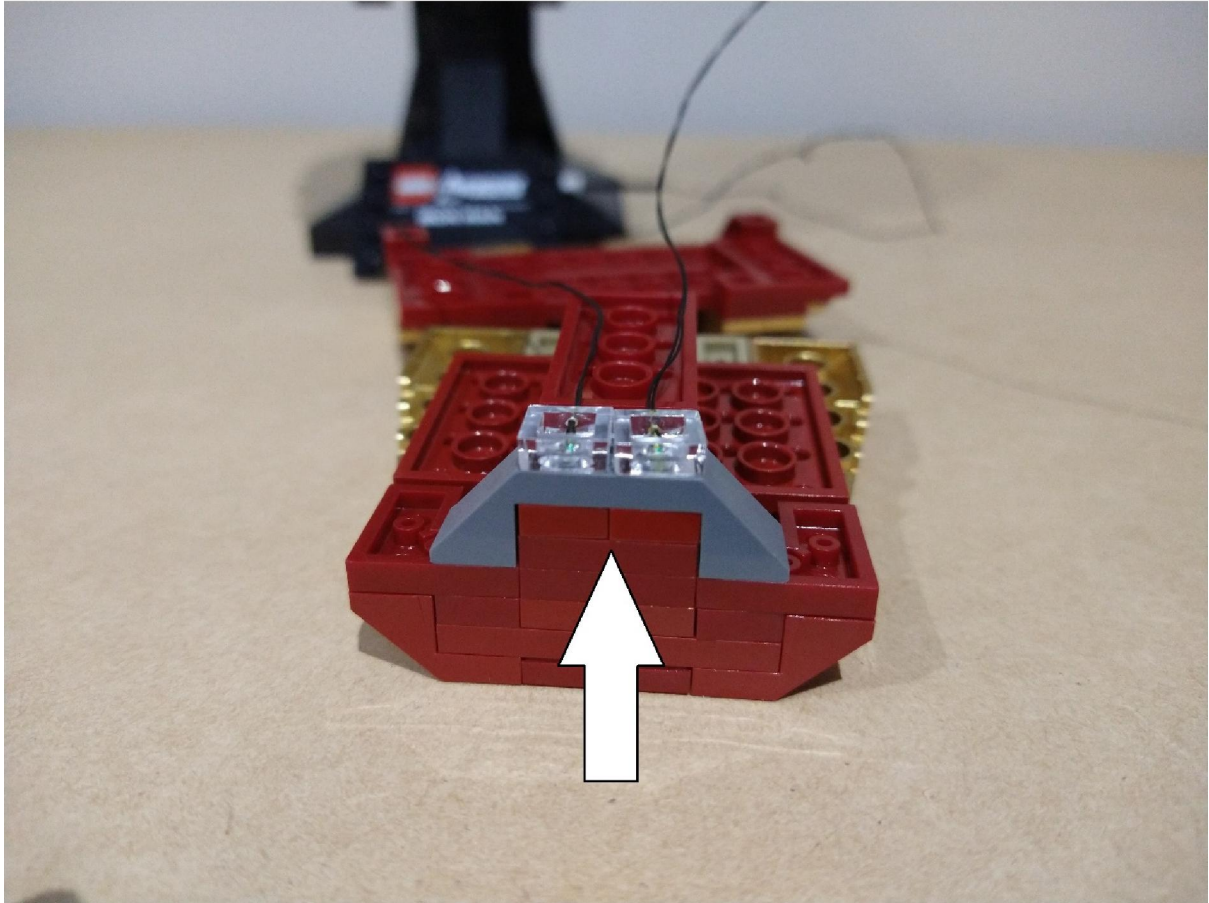


Put his lower face back on and feed the wires into the internal cavity



Put the eye parts back in place and run the bare white LEDs wires between the studs as shown with the LED extending a bit past the top of the sticker.

Bluetack makes holding it in place easier but its optional. Feed the wires into the back of the head.

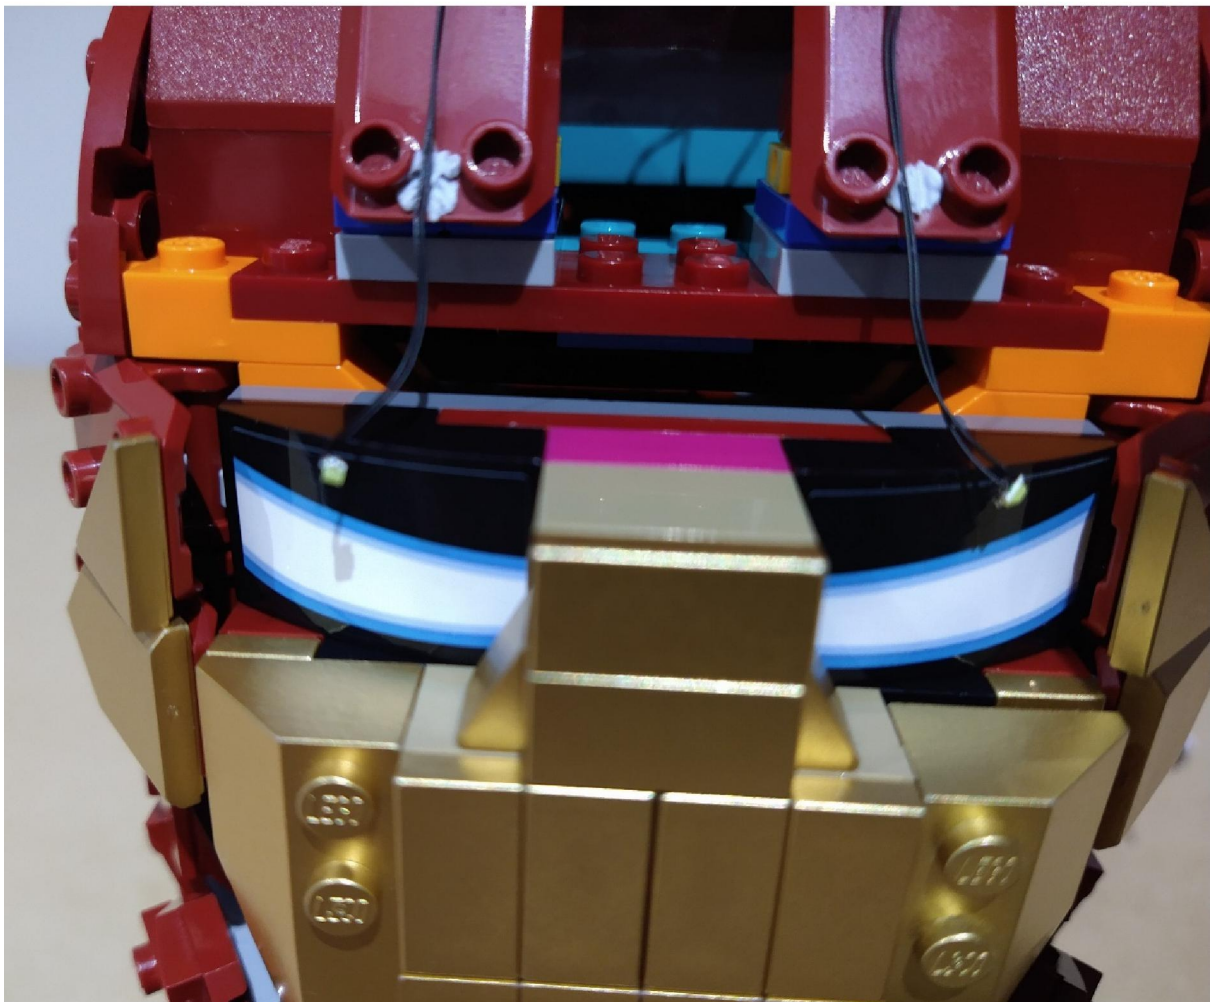

Plug the wires into the battery pack.  
It will fit inside when inserted at  
an angle. Put the top back on.

