






Remove the above parts

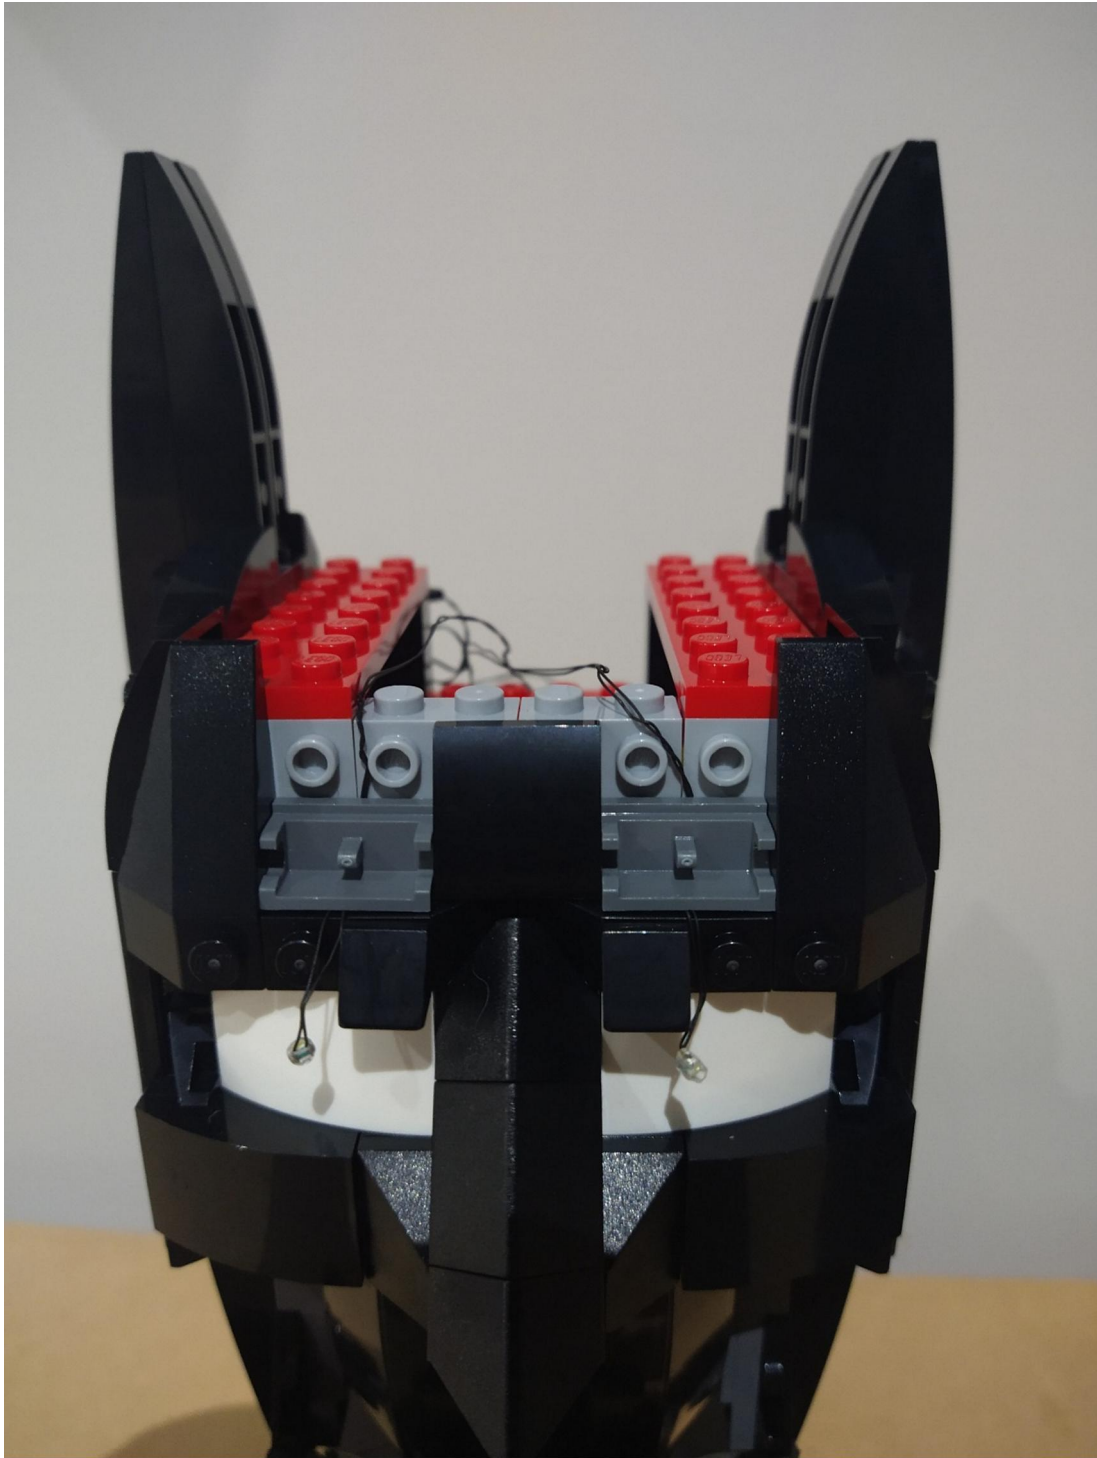

Run the bare LEDs as shown and hold in place with the dark grey parts

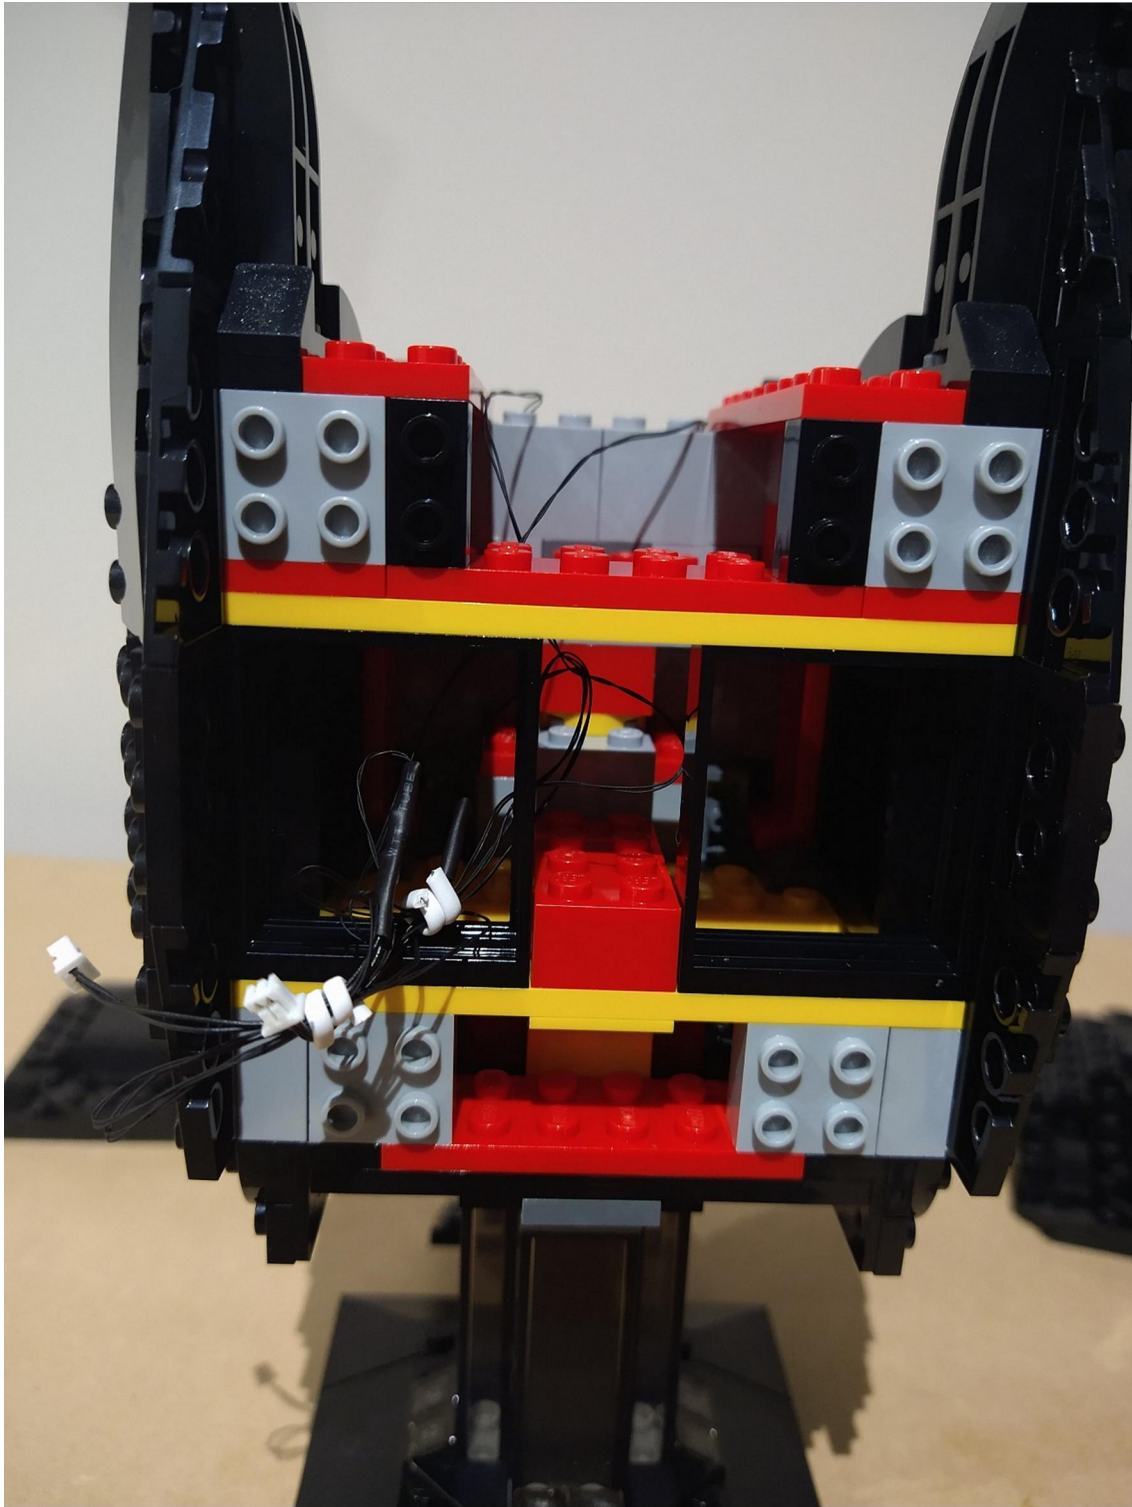

Run the wires between the studs and through to the back

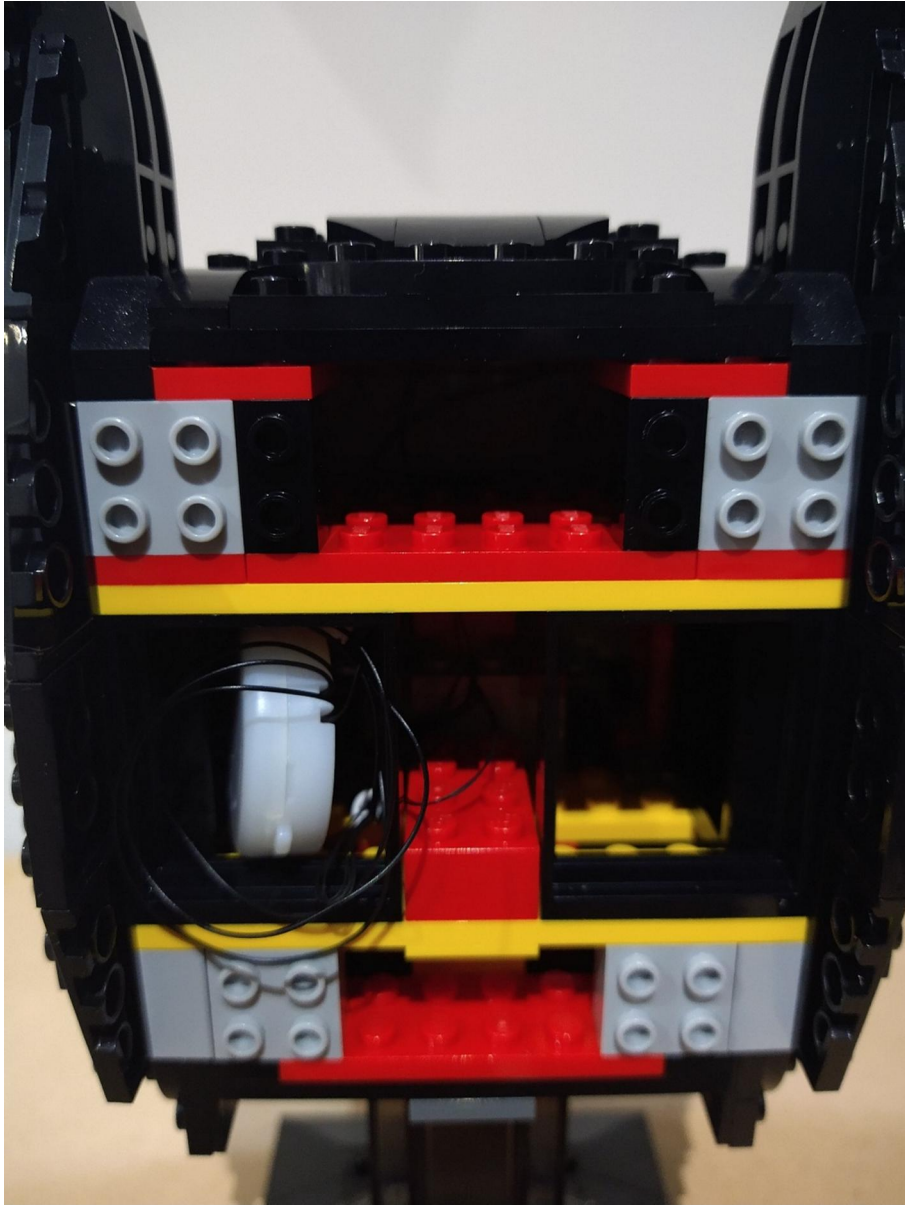

Connect the battery pack and turn on



I'm Batman