



Remove these parts from the base.

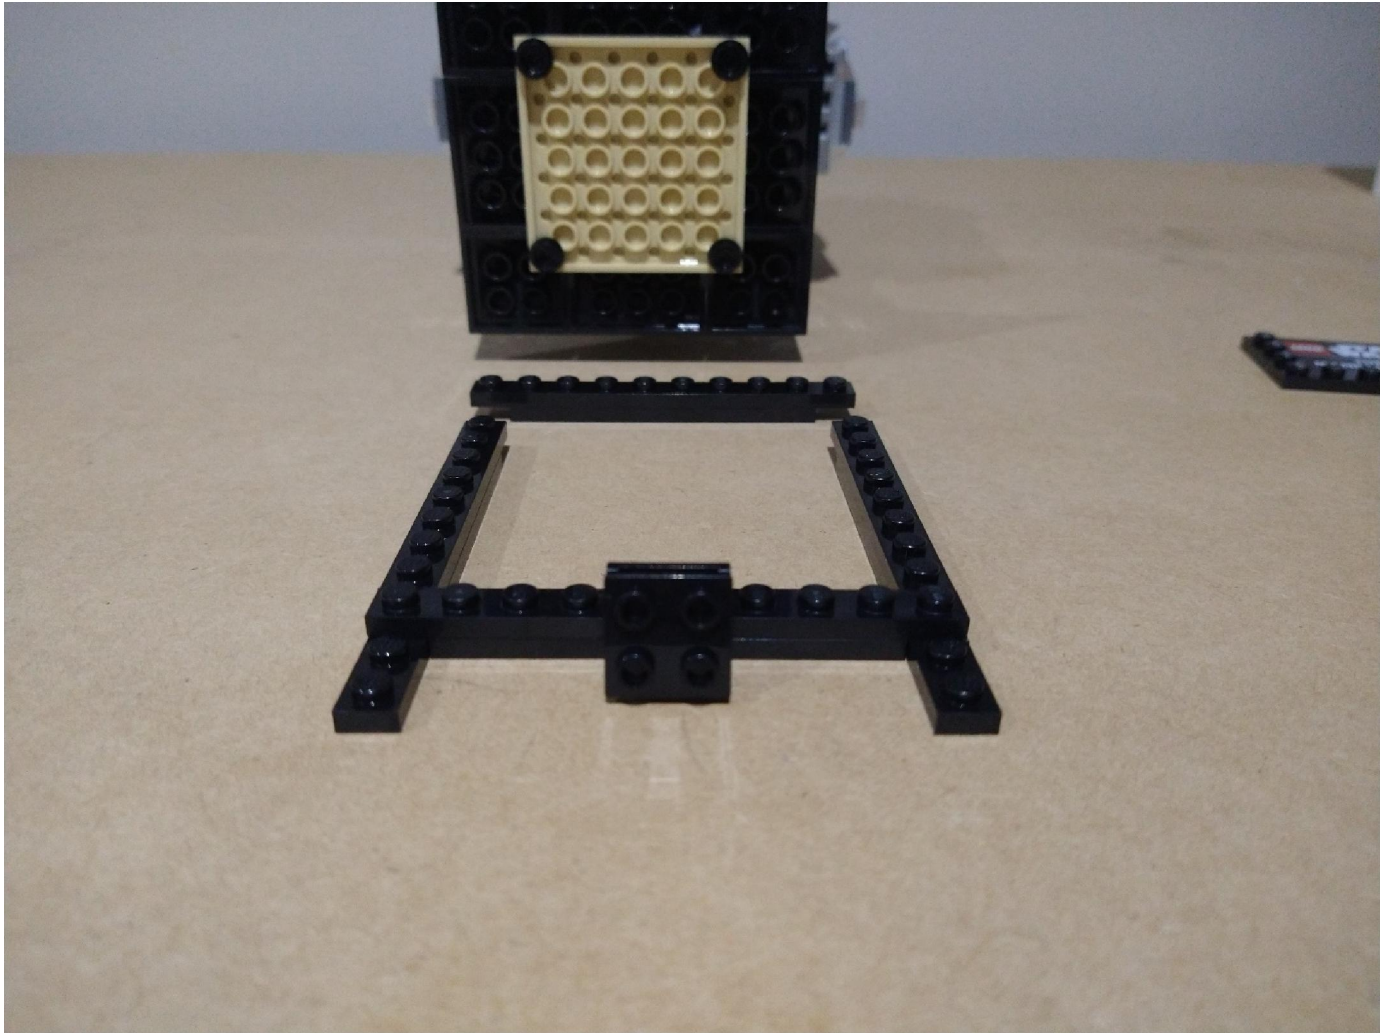

Rearrange the parts to make the 2 side bottom plates protrude as shown. You can use 1x2 plates to fill in the gaps at the back.

Put the parts back and put the 1x3 spotlights onto the protruding plates.



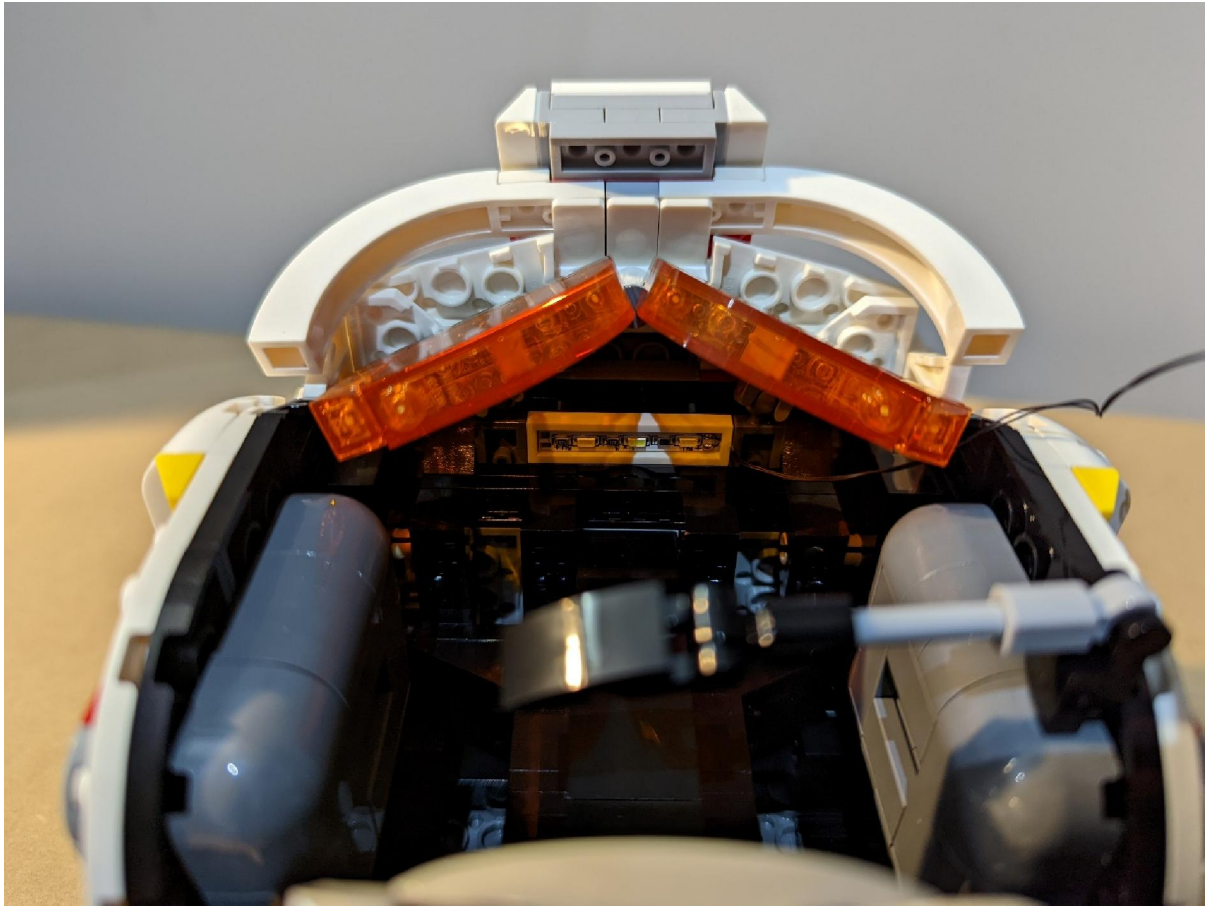

Place the white 1x4 downlight as shown.

Plug it in and turn it on.

