






Remove the shown parts

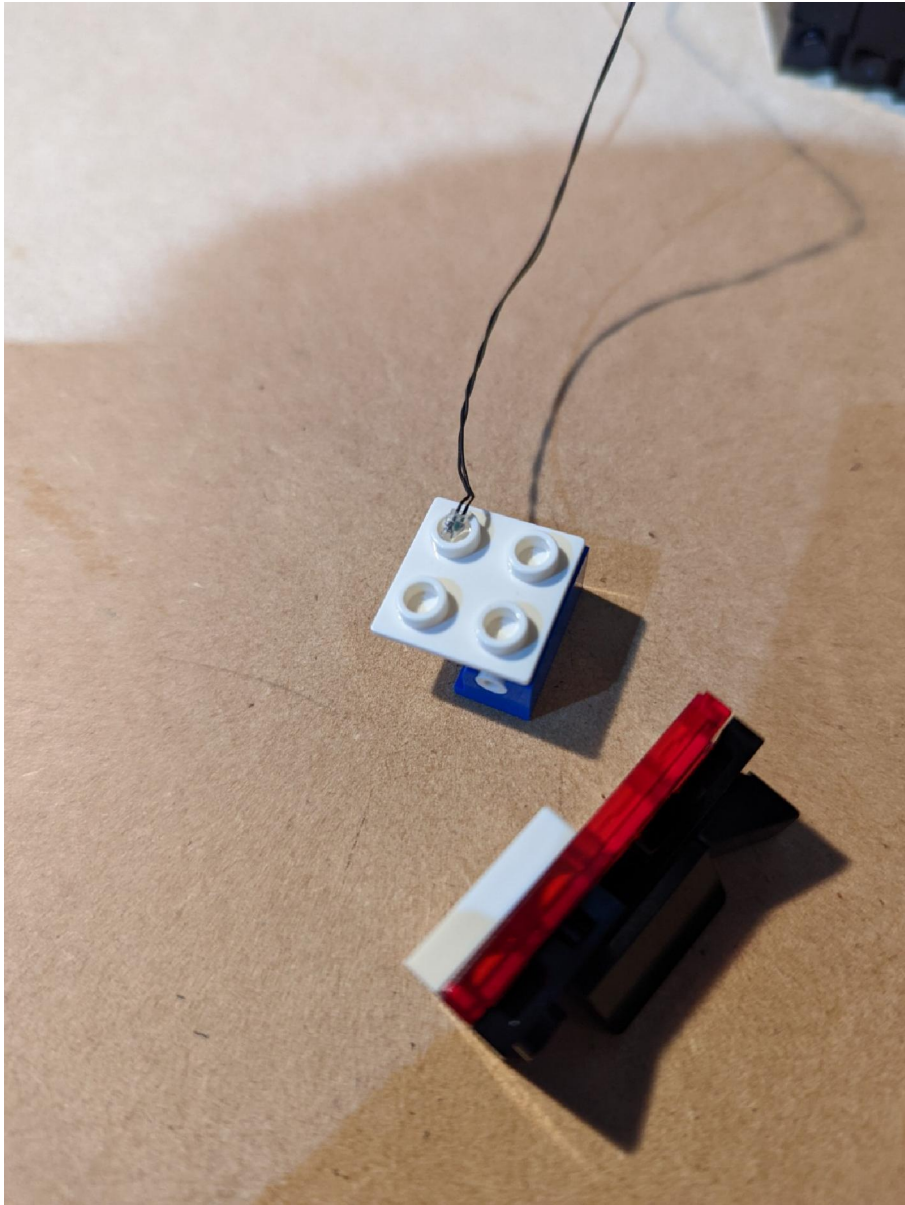


Place the bare led into the open stud.

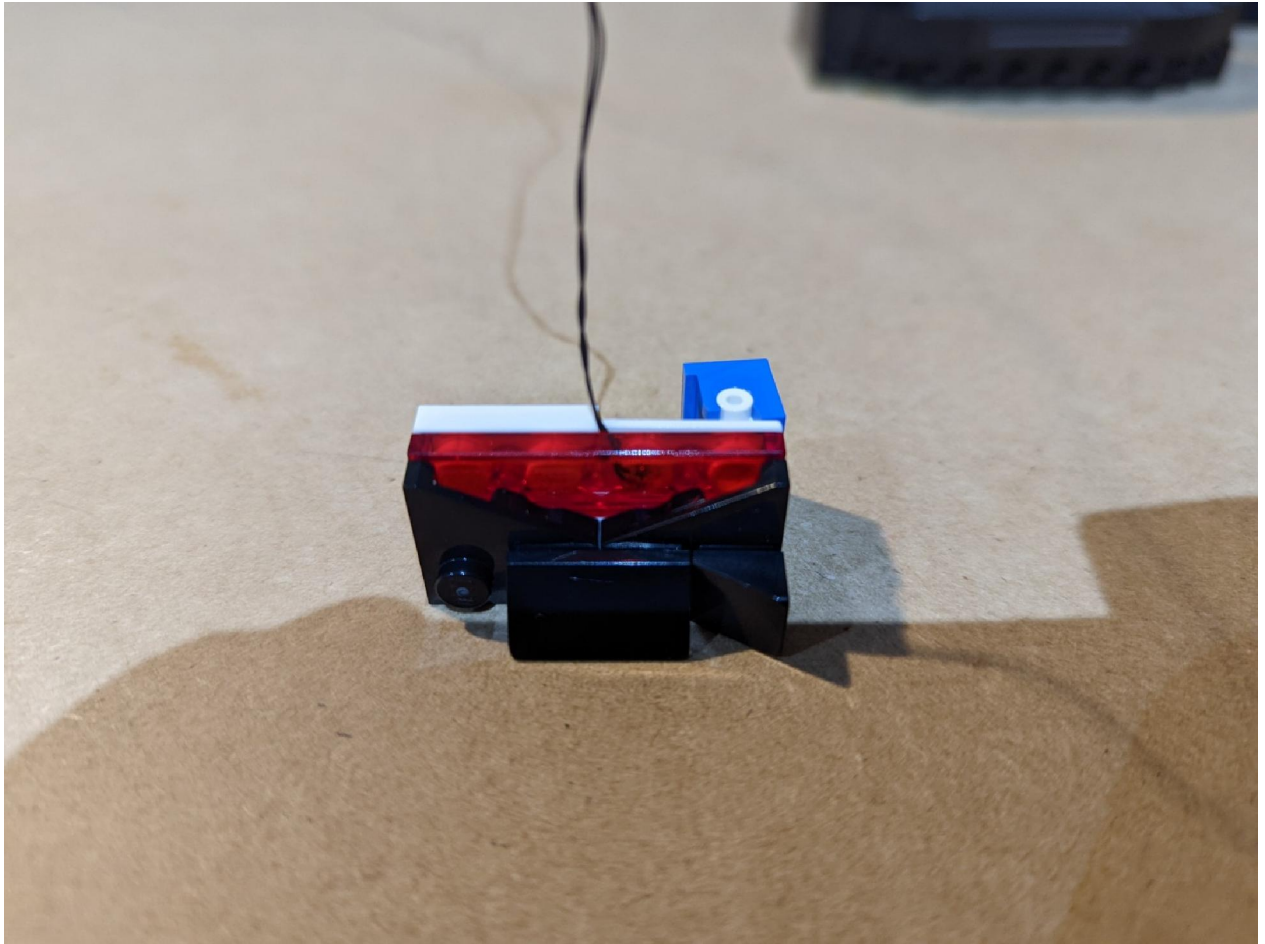


Reassemble the eye part and repeat  
with the other eye.  
Put the eye parts back in.

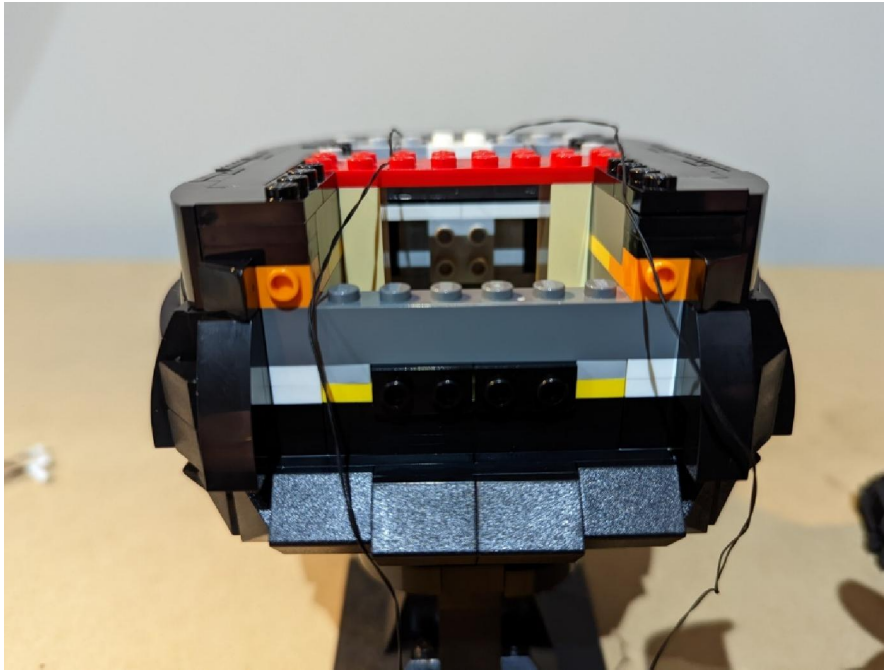

Remove the back parts above to allow you to hide the wires and run them down the back. Make sure the wires are between studs so that they are not cut when placing parts over the top.

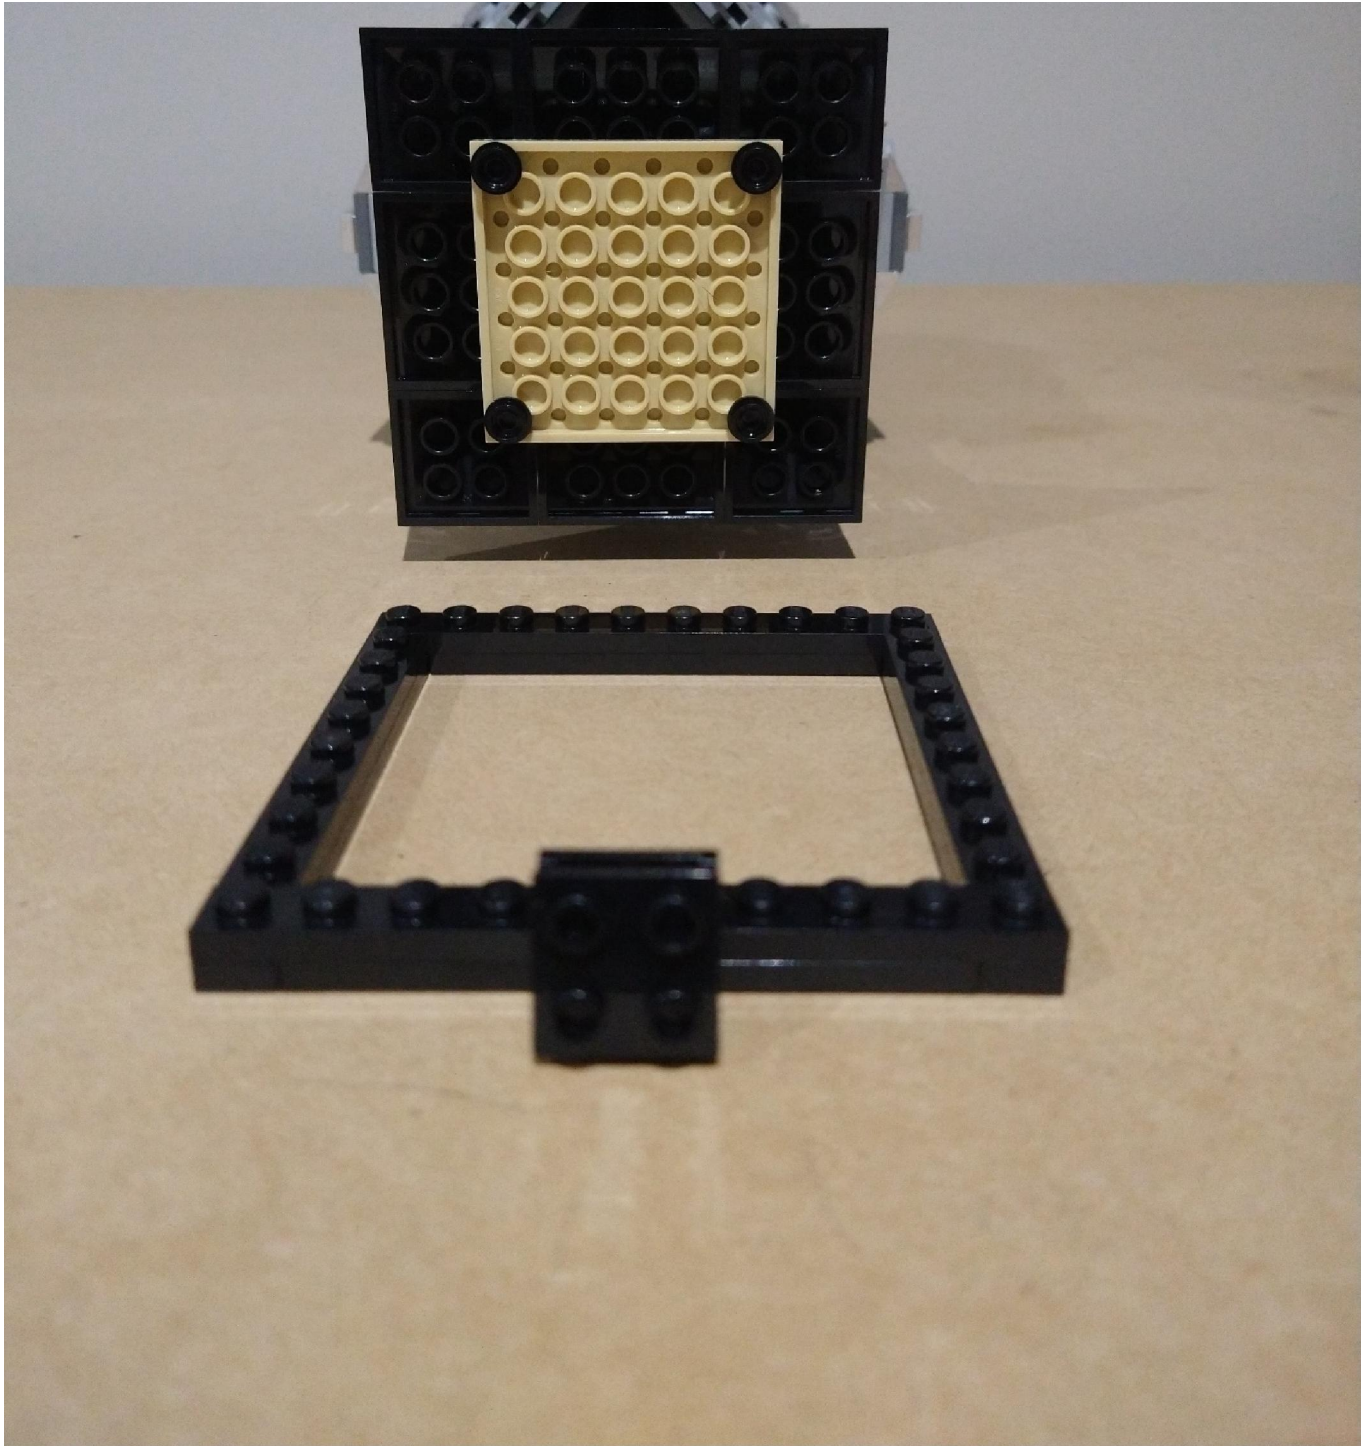

Remove these parts from the base.

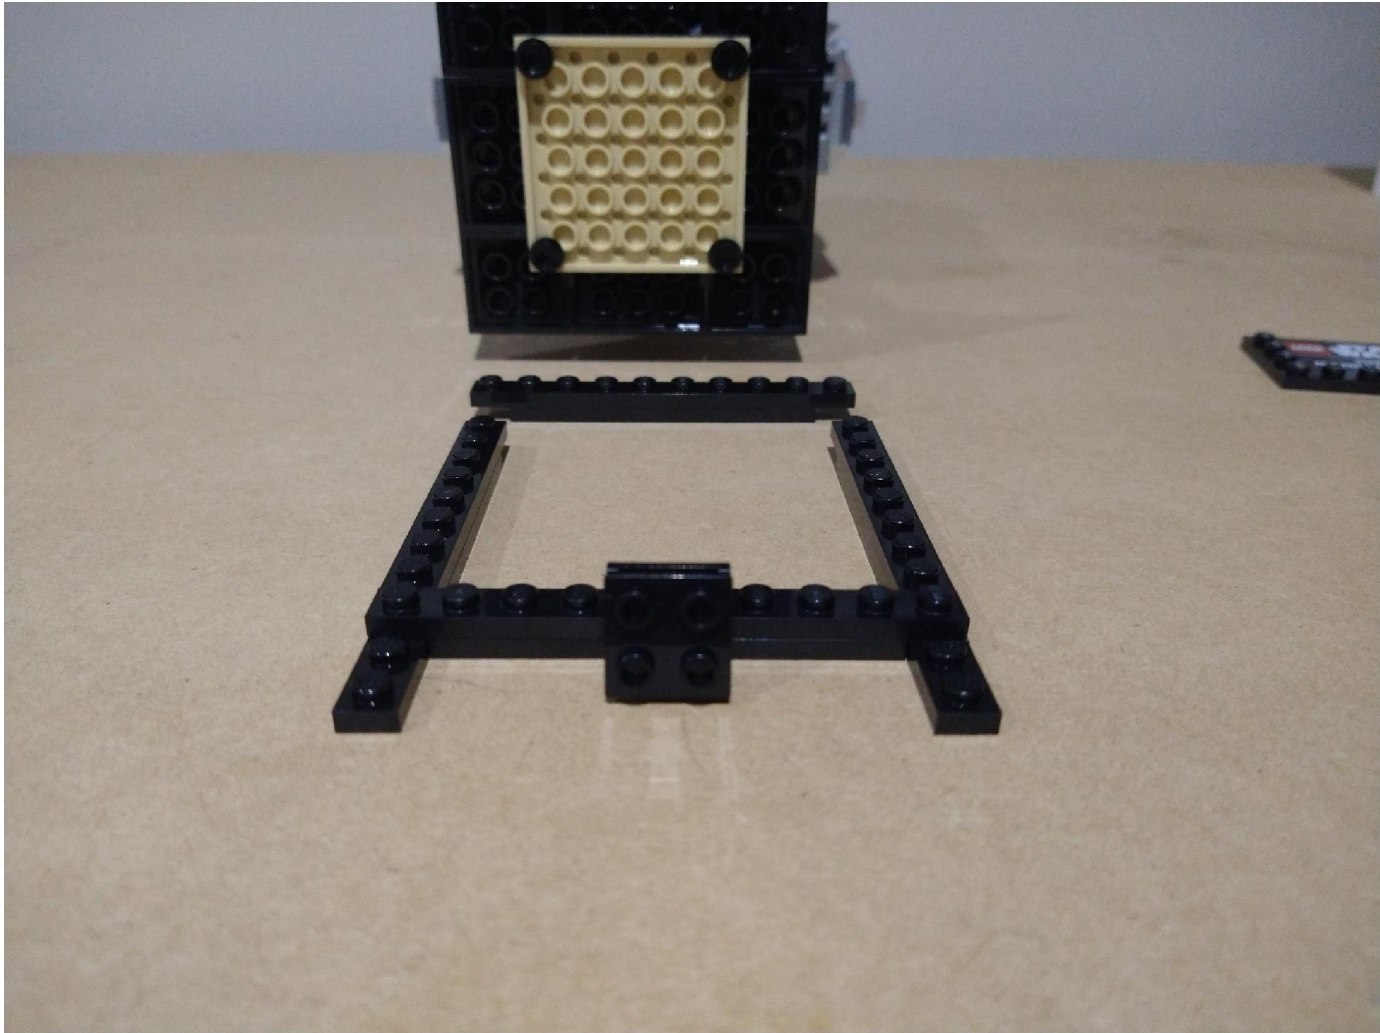

Rearrange the parts to make the 2 side bottom plates protrude as shown. You can use 1x2 plates to fill in the gaps at the back.

Put the parts back and put the 1x3 spotlights onto the protruding plates. Plug in and turn it on.

