Lego 21336 The Office


Installation Guide









Take the lighting part with fire be ready, then remove the tiles as shown

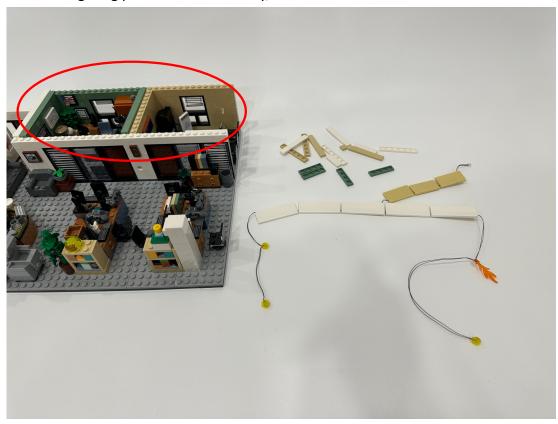

Assemble the tan and white lighting tiles to replace the remove tiles Beware of the direction, the lights of white tiles should be facing the main office side

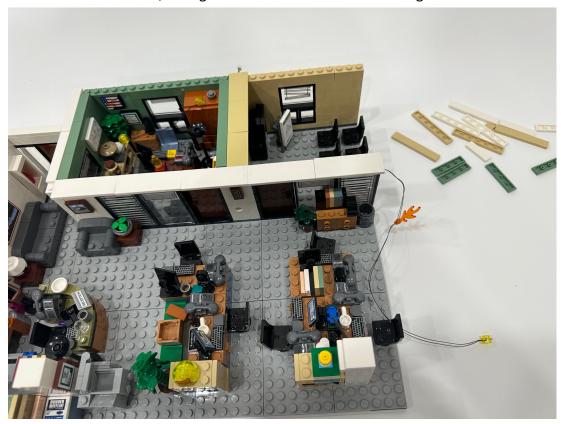


Then assemble the lighting flame inside the basket at the corner and the yellow lighting round plate to the lamp, the wire in between two lights can be hidden by the cabinet and the chair

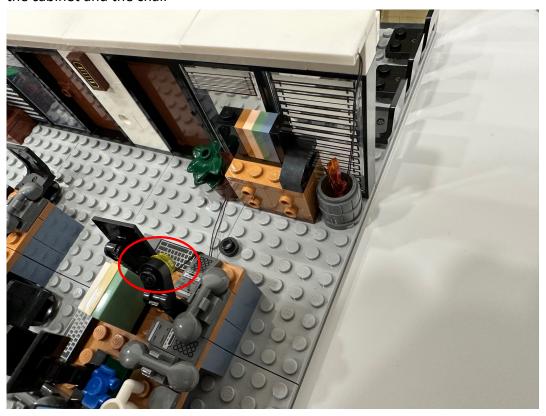

The remain lighting round plates will be used to place on the lamp shown in red circle, then in blue circle, move the 1x6 white tiles to fill up the corner *Use the white 1x2 tile provided to fill up the right corner



Leave the connector for the other lighting part

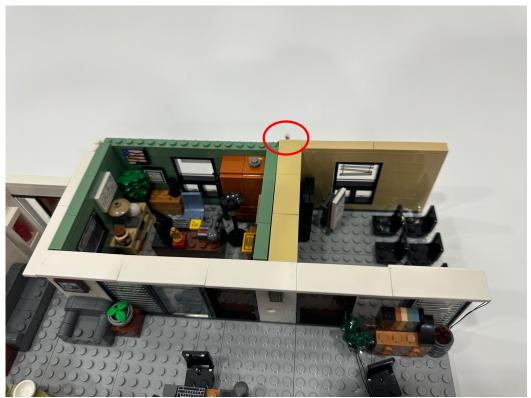

Now take the other lighting part, start by assembling the green lighting tiles Remove the green tiles on the side to let the wires go through






Now assemble the white lighting tiles and put the removed tiles back after that



Assemble the lighting round plates on the lamp as shown



The single led bulb will be used to put inside the photocopier, start by detaching the photocopy machine as shown

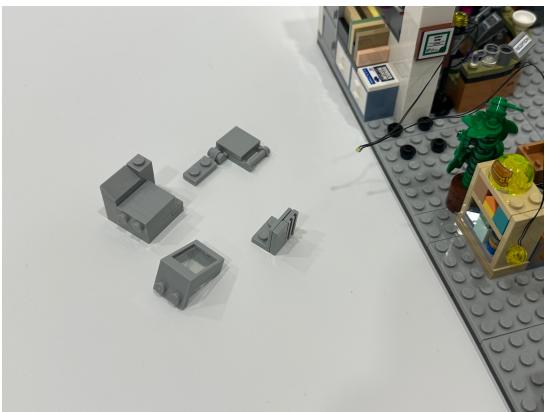

Clip the led bulb below the clear window, then restore the machine to stable the bulb inside the machine



Assemble the last lighting round plate to the lamp



At last, connect the plugs then you can power up the lighting set by the USB cable

