


Lego 42177


Mercedes-Benz G500 Professional Line

Installation Guide




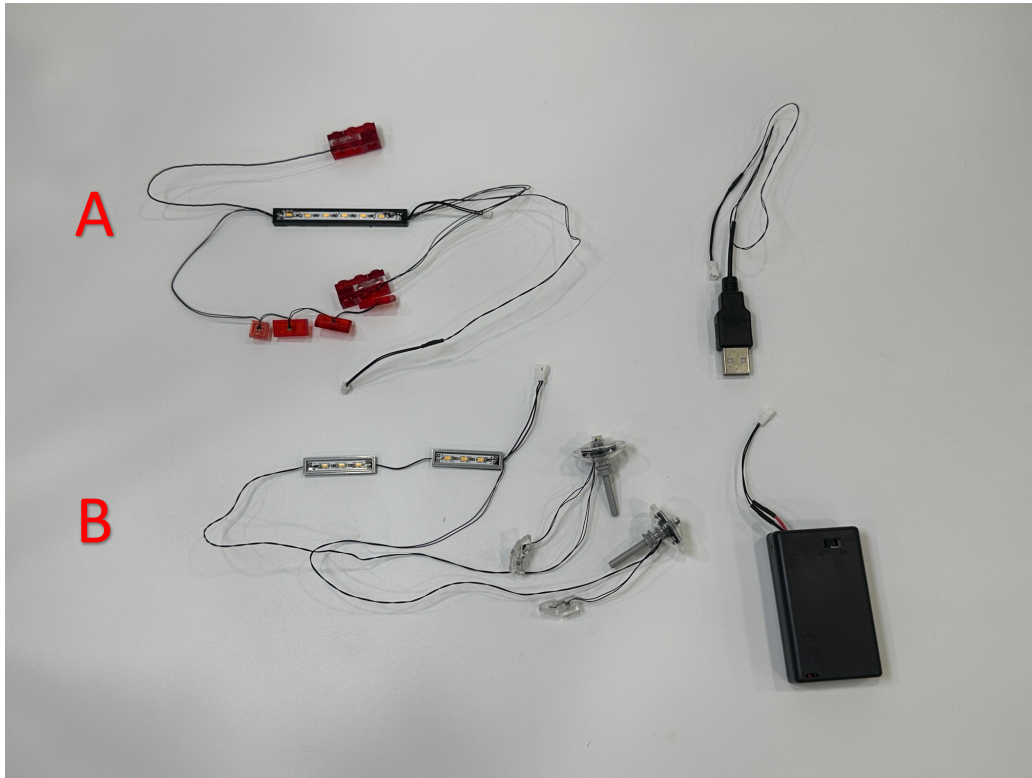

Take lighting parts A to assemble on the rear of the car
Firstly take away the rear lights, keep the orange 1x3 tiles and put them on the lighting parts as shown

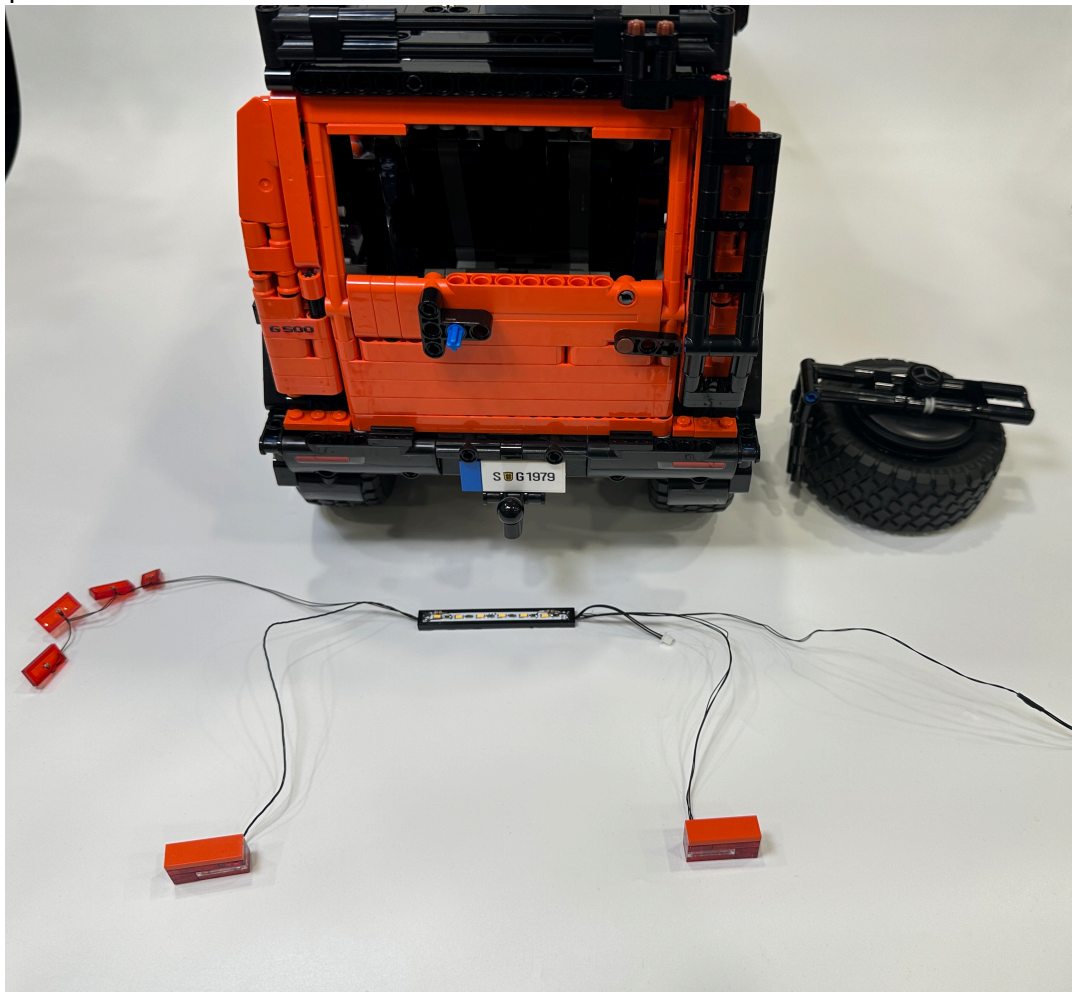



Restore right side of the rear lights, then get the left lights through the hole in the blue circle

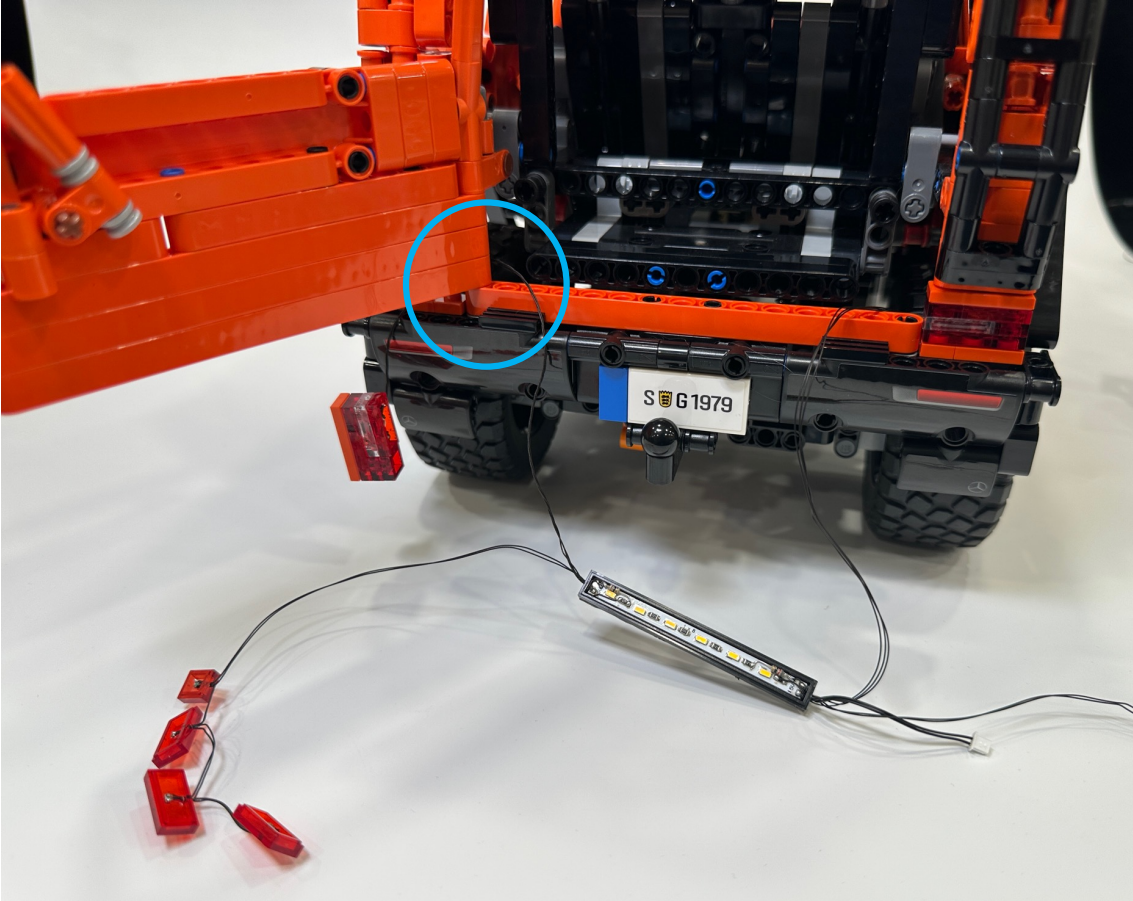


Then restore the left rear light




Replace the clear red tiles on top of the rear door by the lighting tiles, then stick the black lighting tile as shown (blue circle)

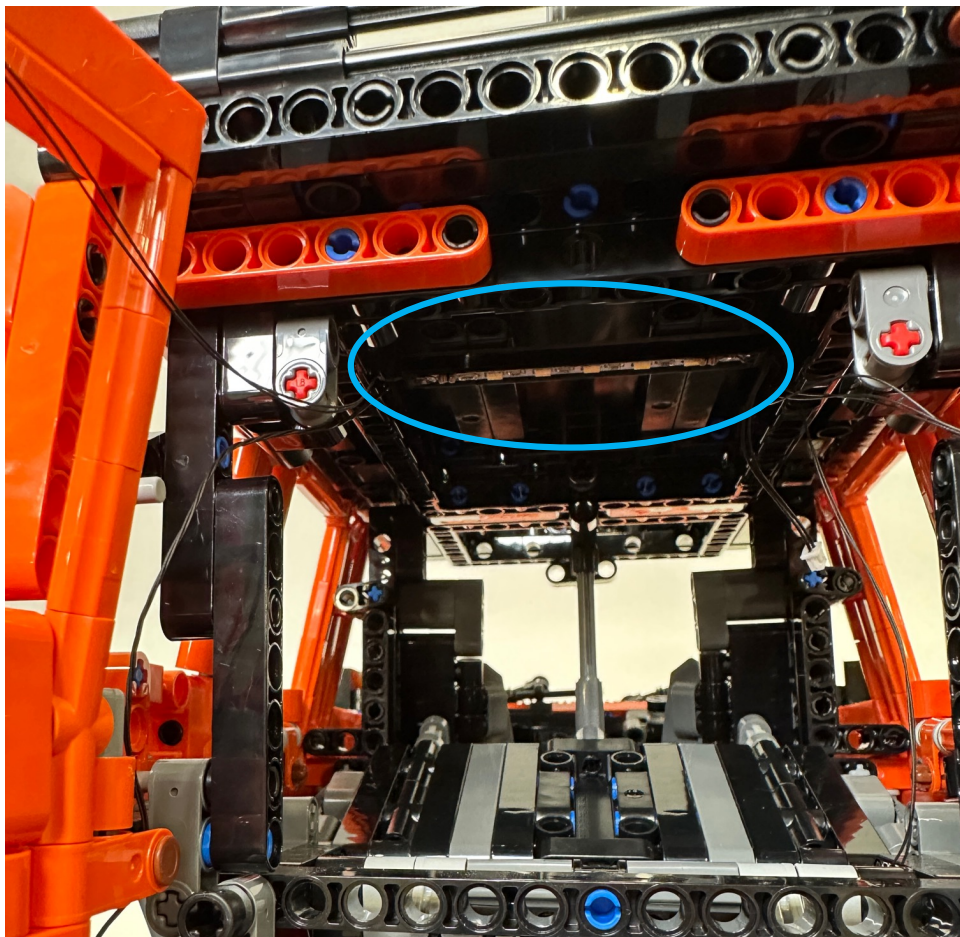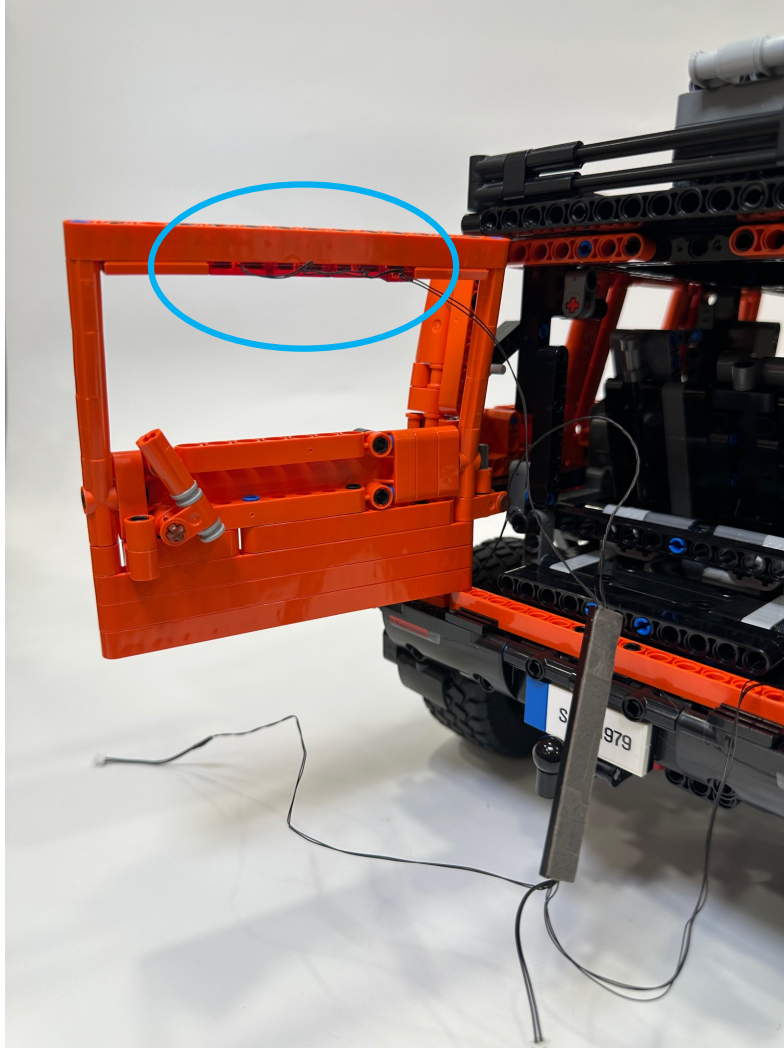


Get the wire with connector through to the bottom of the car

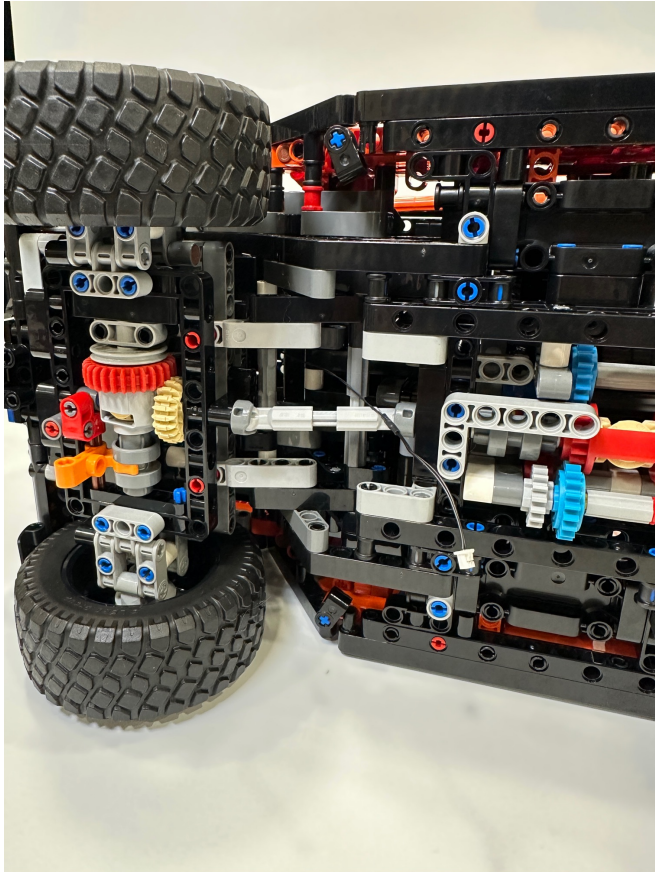

Connect the connector with lighting part B

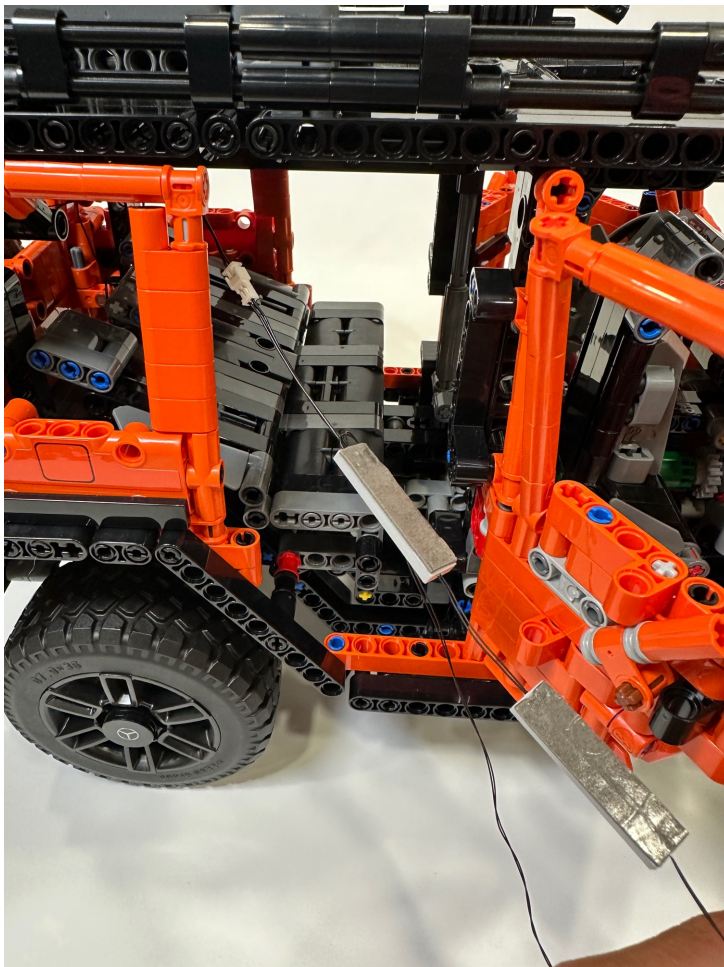


Stick the grey lighting tiles after the plugs are connected

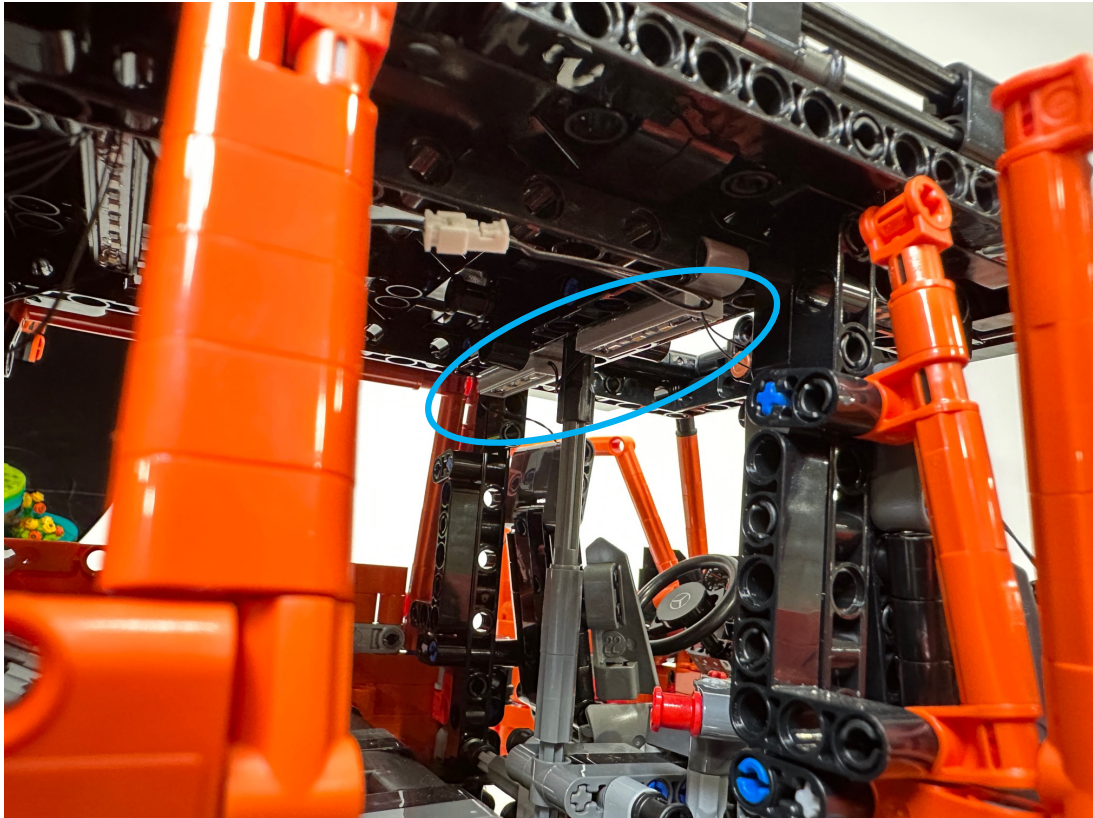


Take both of the front lights to the front of the car




Split the bar as shown to get the lights to install at the front

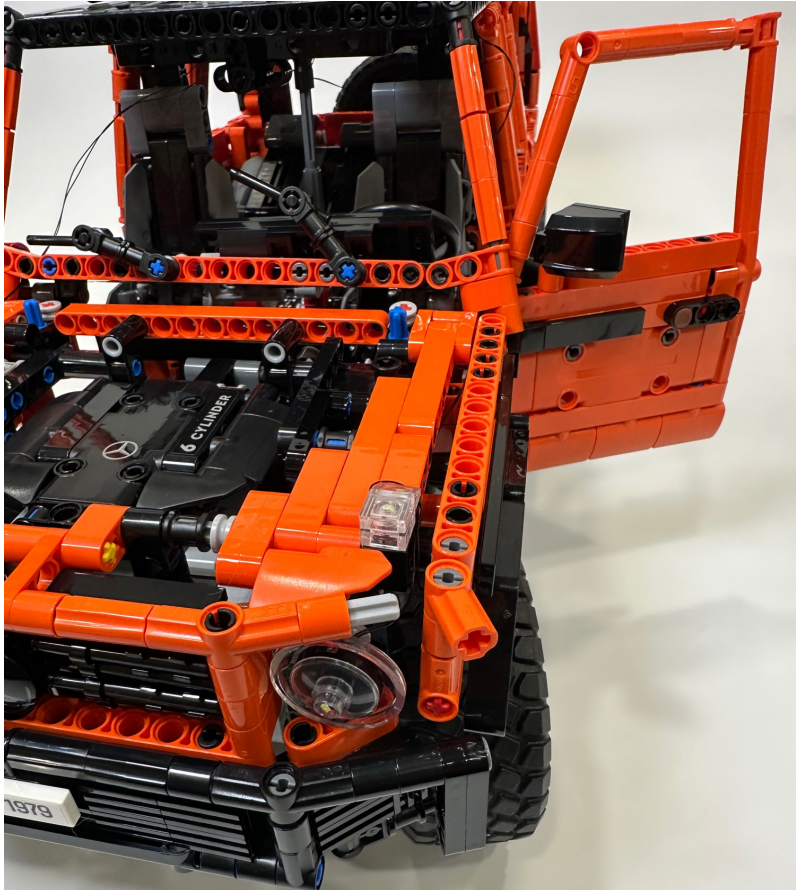

For the wire between the lighting tile and the front light, lift up the black technic bar to stabilize it

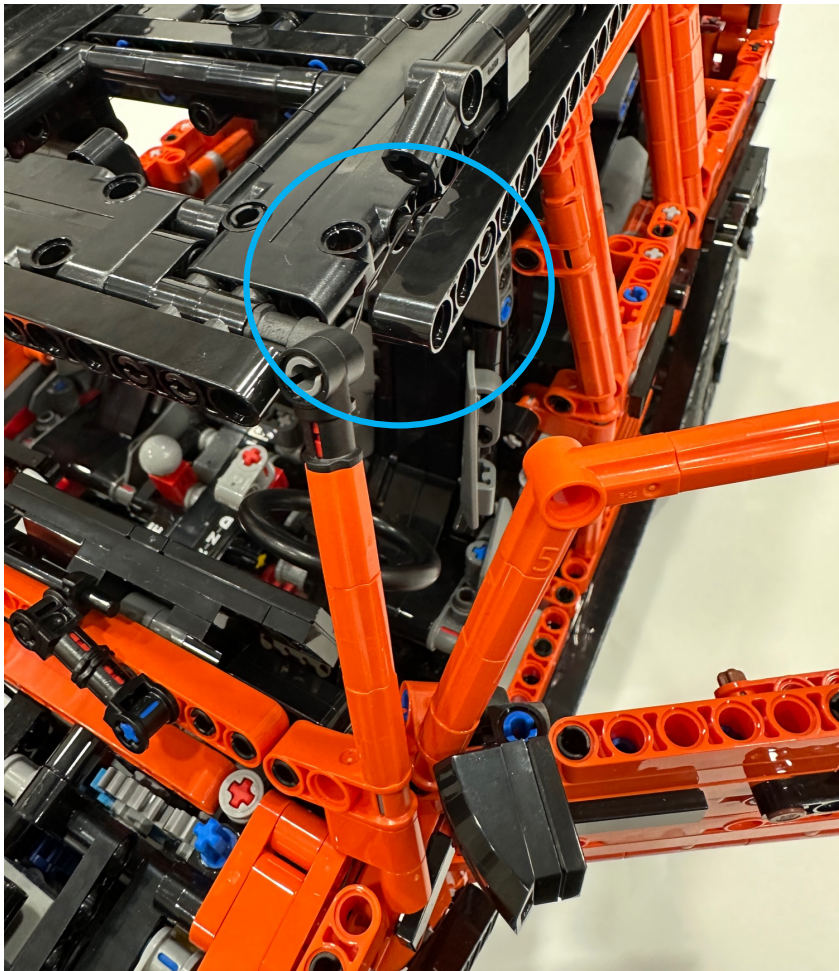

Replace the front lights on the other side by the same procedure as before

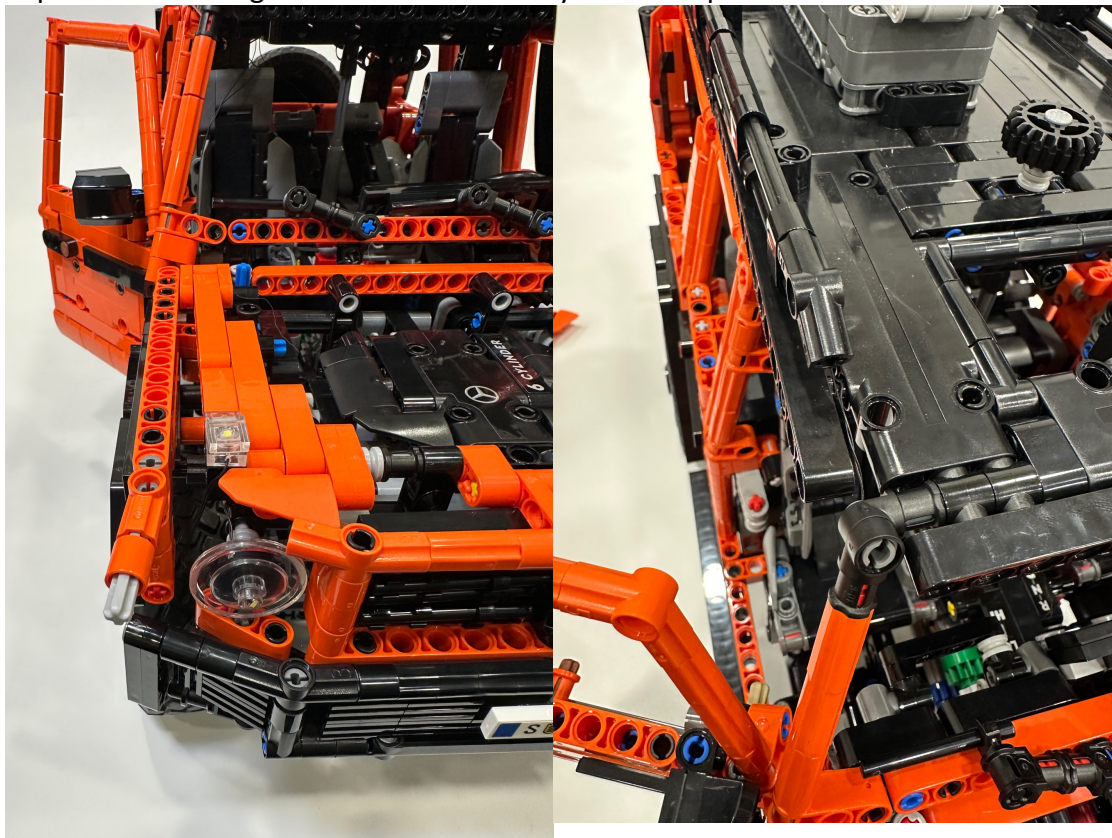

Put the cover back and the light installation is done



To power up, you can choose to use USB or battery
The battery case can be plugged at the bottom of the car by the shown position

